

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-123360 Caged Clown

Please follow the step by step guide and enjoy your Caged Clown!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please assemble item according to instructions. Connect all wires according to matching color.
2. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Lower Cage Cover
- B. Clown Head
- C. Sensor
- D. Clown Costume
- E. Cage Bars x 4
- F. Cage Bars-1 x 8
- G. Upper Cage Cover
- H. Straps x 2

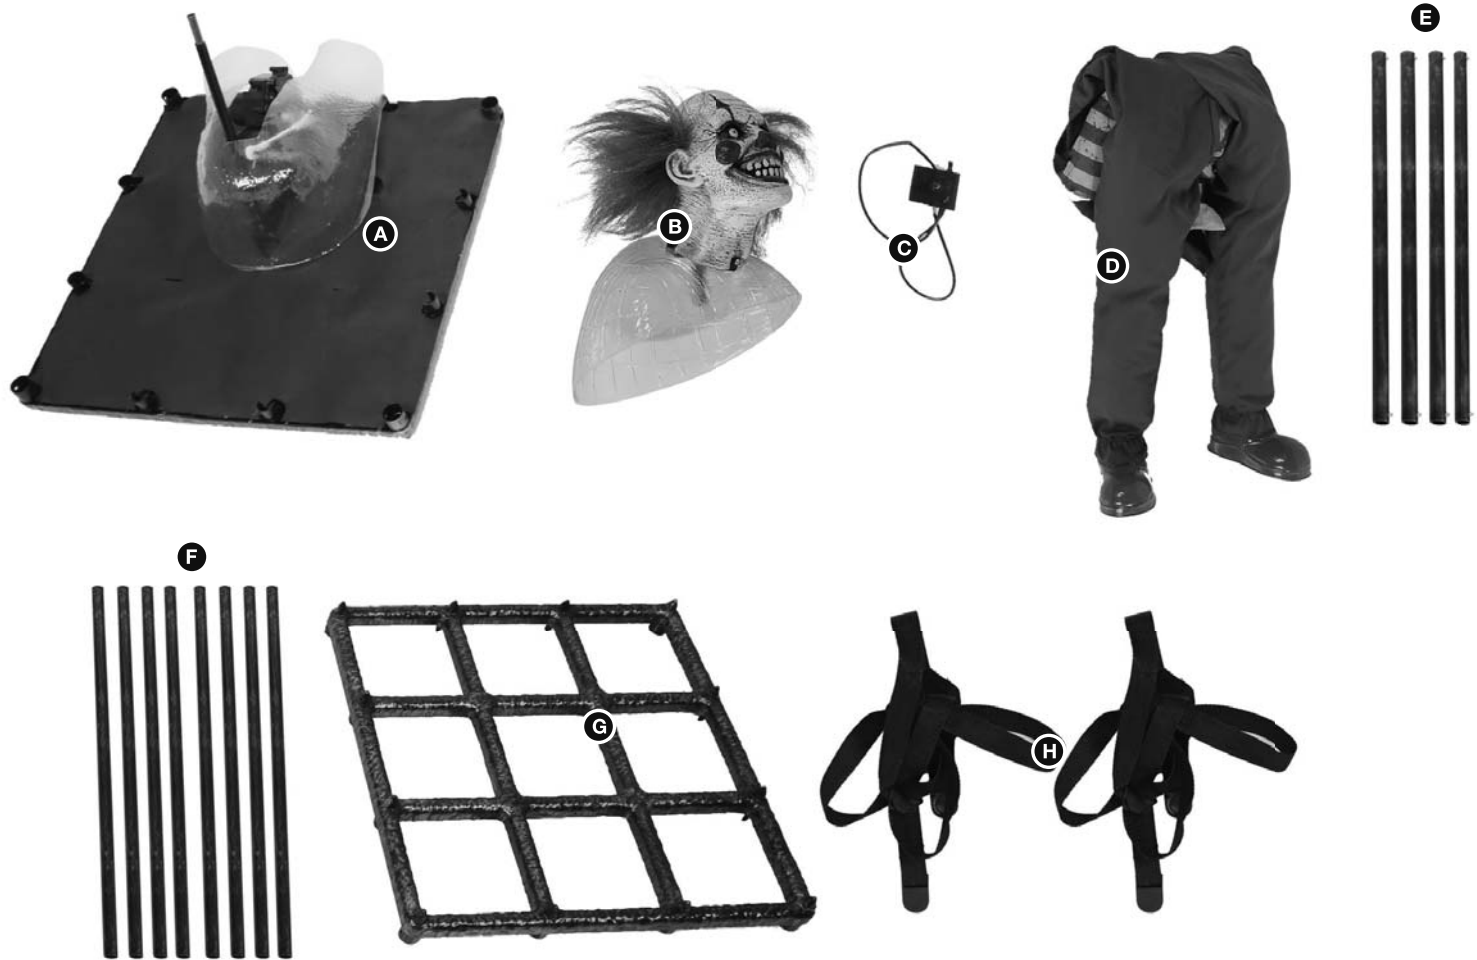


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM, OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

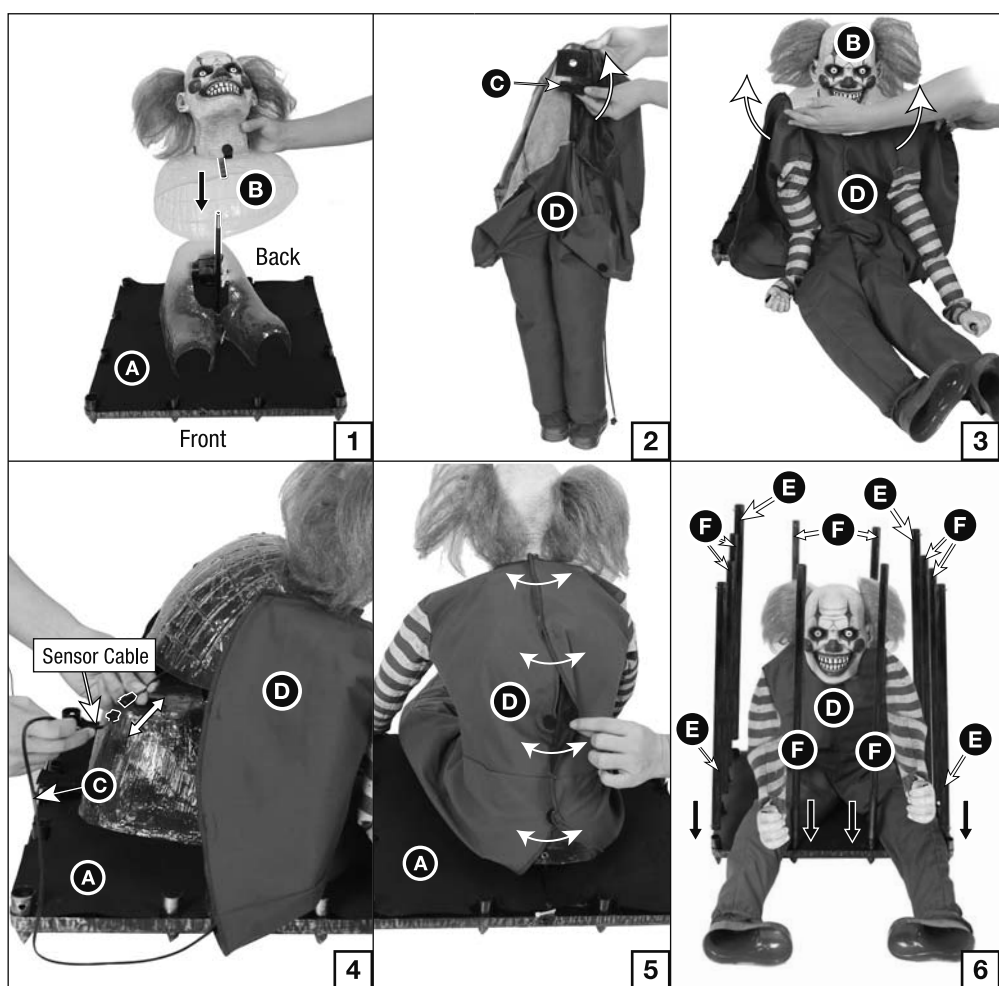


STEP 1

1. Attach the (B) Clown Head to the (A) Lower Cage Cover and secure by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 1.
2. Attach the (C) Sensor to the (D) Clown Costume as shown in Figure 2.
3. Attach the (D) Clown Costume to the (B) Clown Head as shown in Figure 4.
4. Connect the sensor cable from the (D) Clown Costume to the (A) Lower Cage Cover as shown in Figure 4.
5. Secure the back of the (D) Clown Costume with the hook & loop closures as shown in Figure 5.
6. Attached the (E) Cage Bars & (F) Cage Bars-1 onto the (A) Lower Cage Cover as shown in Figure 6.

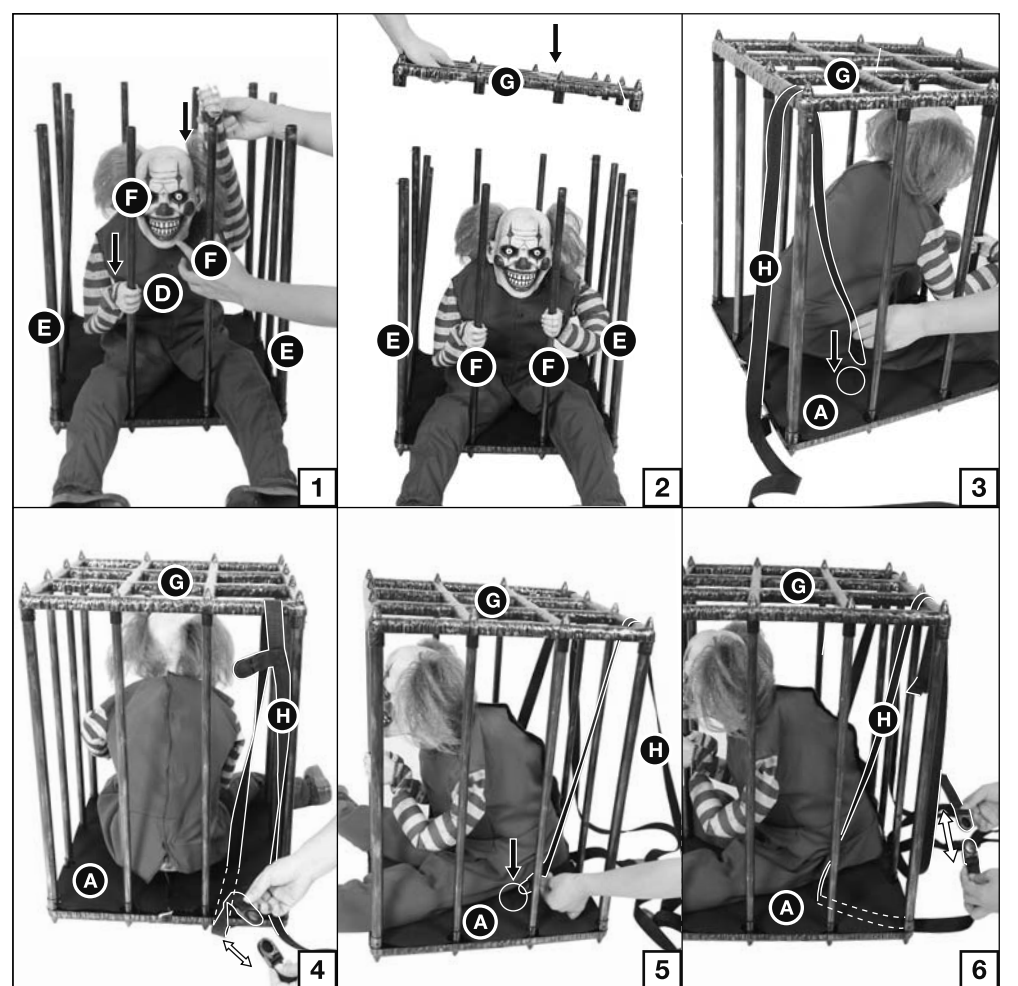

STEP 2

1. Slide the hands located on the (D) Clown Costume over the front two (F) Cage Bars-1 as shown in Figure 1.
2. Attach the (G) Upper Cage Cover to the assembled Cage Bars as shown in Figure 2.
3. Attach the (H) Strap through the (G) Upper Cage Cover and then through the hole located on the (A) Lower Cage Cover as shown in Figure 3.
4. Continue to pull the (H) Strap through the bottom of the (A) Lower Cage Cover and buckle the two ends together as shown in Figure 4.
5. Attach the other (H) Strap through the (G) Upper Cage Cover and then through the hole located on the (A) Lower Cage Cover as shown in Figure 5.
6. Continue to pull the other (H) Strap through the bottom of the (A) Lower Cage Cover and buckle the two ends together as shown in Figure 6.

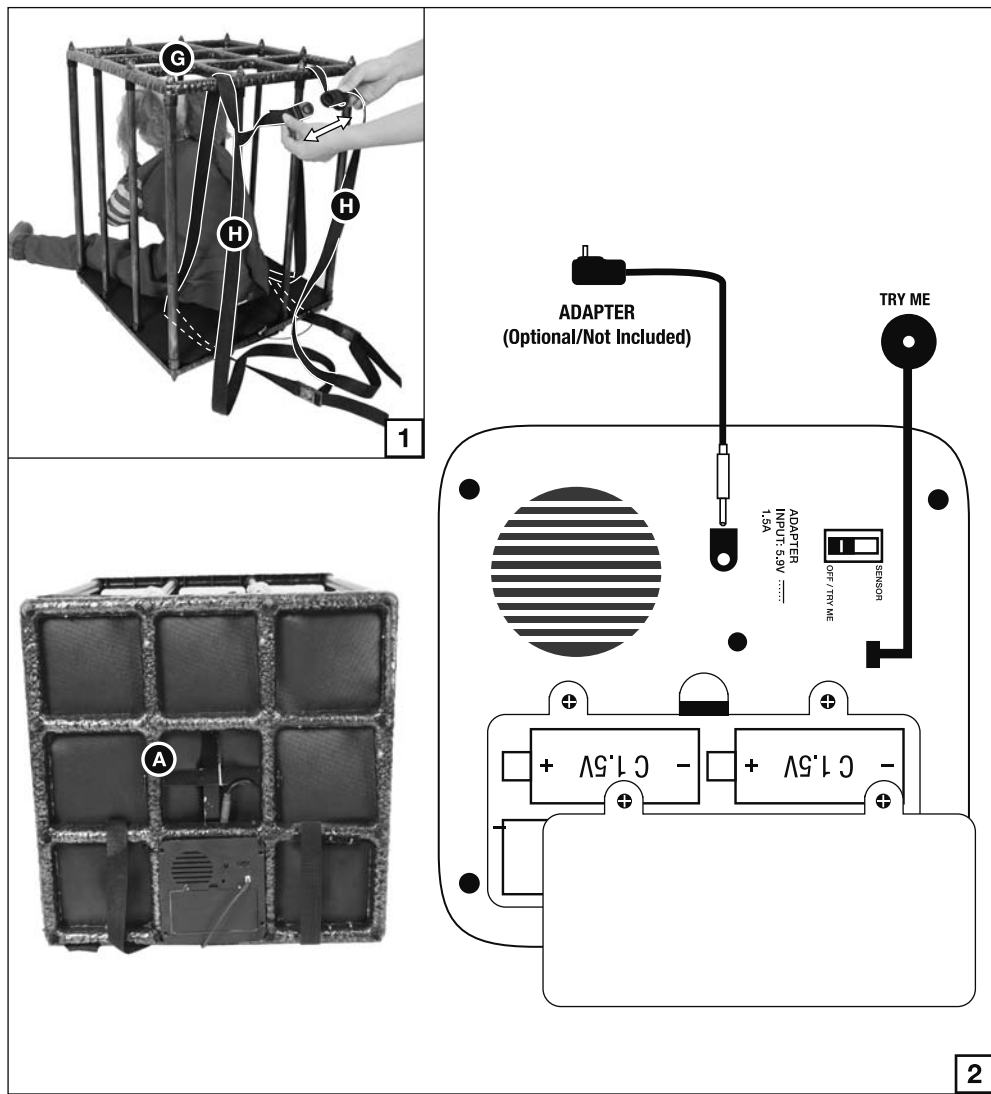

STEP 3

Buckle the two straps as shown in Figure 1.


This item is powered by 4 x 1.5V C batteries, not included.

OPTIONAL: This item can be operated with a power adapter (not included) plugged into a standard wall outlet. Only use an adapter with these specs:

Switching Power Adapter

Input 100-240 /AC 50-60/Hz

Output: 5.9V 1.5A

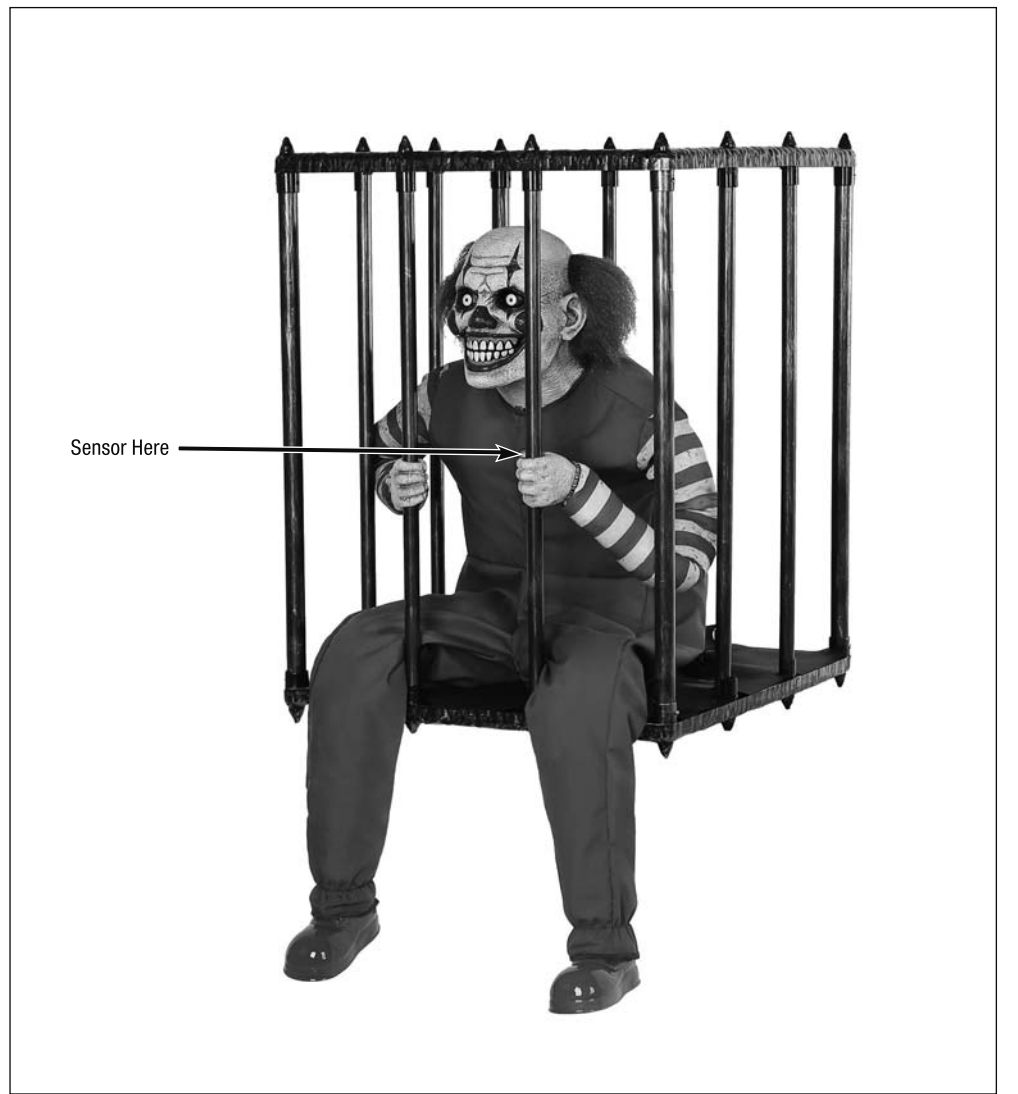

Your Caged Clown is now fully assembled. Enjoy!

OPERATION INSTRUCTIONS:

1. Battery replacement instructions:

4 x 1.5V C Batteries Required (Not Included)

You will need a screw driver (Not Included).

Remove safety screw with screw driver, slide battery cover to open, insert new batteries observing correct polarity, replace the lid and screw. Do not over tighten screw.

2. Settings:

Sensor: This switch mode will only activate sound and animation when the sensor is activated. The item will operate for 1 audio-cycle with each sensor activation.

OFF/Try Me: This switch mode allows the item to be activated only if triggered by pressing the TRY ME. The item will operate for one audio cycle with each Try-Me activation.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. **DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

