

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-124621 Ring Around the Rosie



Please follow the step by step guide and enjoy your Ring Around the Rosie!

CARE AND STORAGE INSTRUCTIONS

For best performance, operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base
 - B. Upper Support Poles x 4
 - C. Boy
 - D. Girl-1
 - E. Girl-2
 - F. Girl-3
 - G. Support Poles x 4
 - H. Circular Disc
 - I. Step Pad
 - J. Universal Adapter (Included)
- Input: 100 - 240VAC 50/60Hz
Output: 5.9V 3.0A

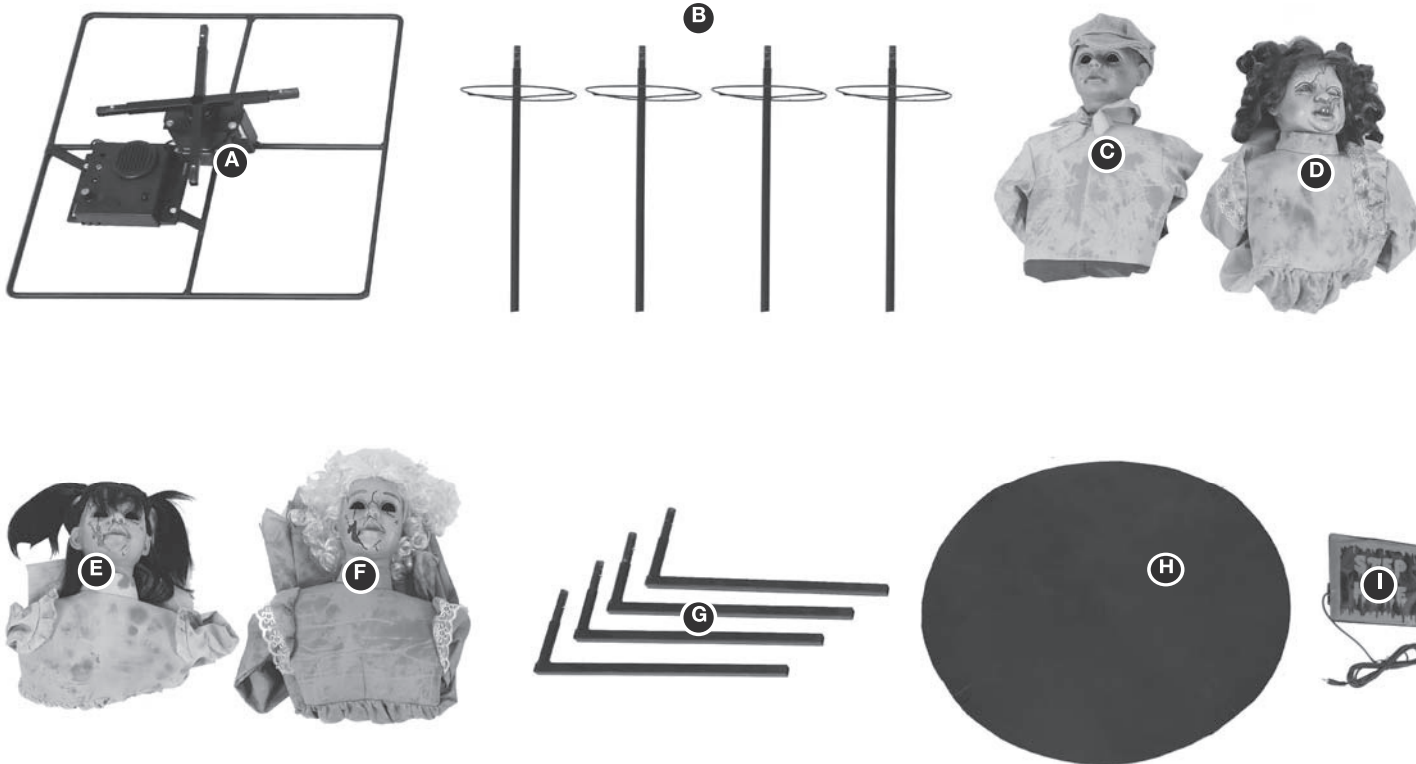

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

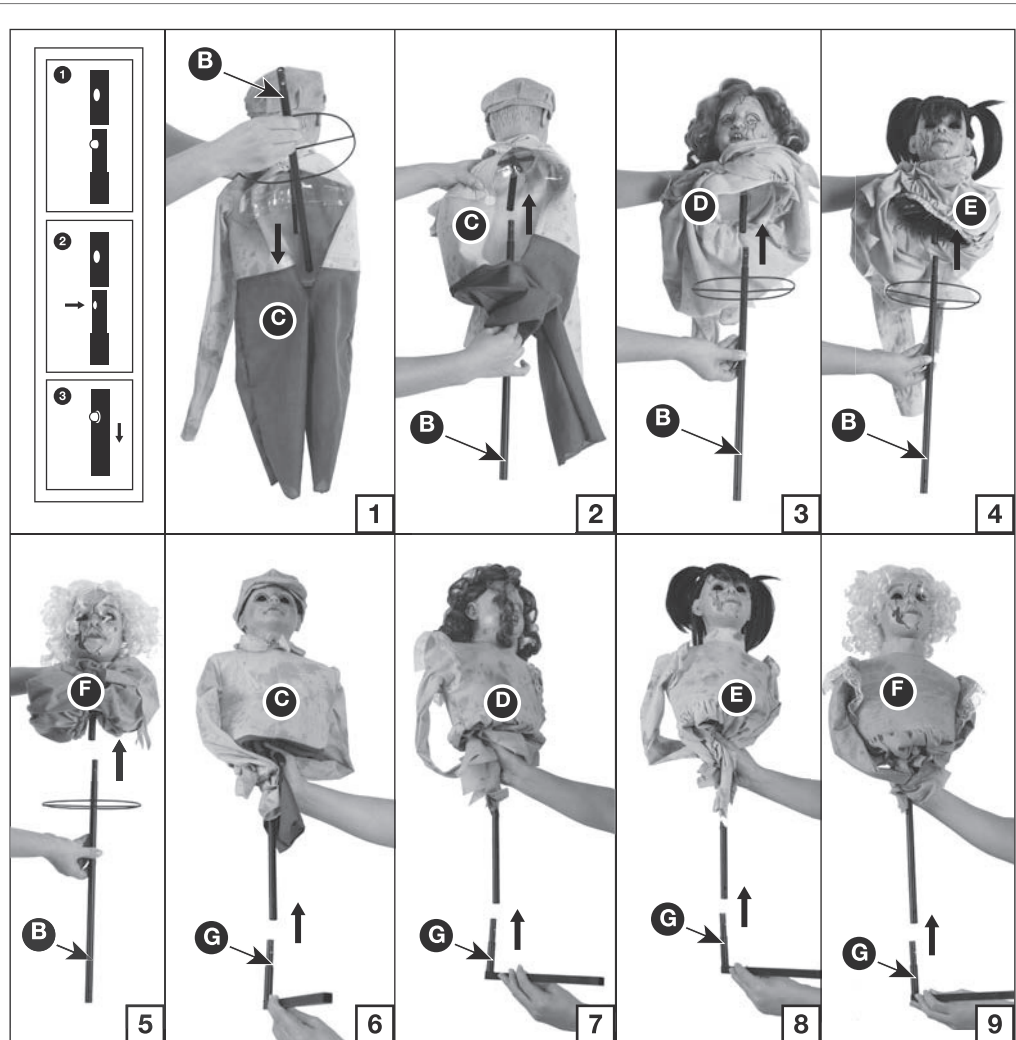

STEP 1


Attach the (B) Upper Support Pole through one of the trouser legs located on the (C) Boy as shown in Figure 1.

Attach the (B) Upper Support Pole to the (C) Boy by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 2.

And then attach the (B) Upper Support Poles to the (D) Girl-1 / (E) Girl-2 / (F) Girl-3 by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 3,4,5.

Attach the (G) Support Pole to the (C) Boy by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 6.

And then attach the (G) Support Poles to the (D) Girl-1 / (E) Girl-2 / (F) Girl-3 by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 7,8,9.

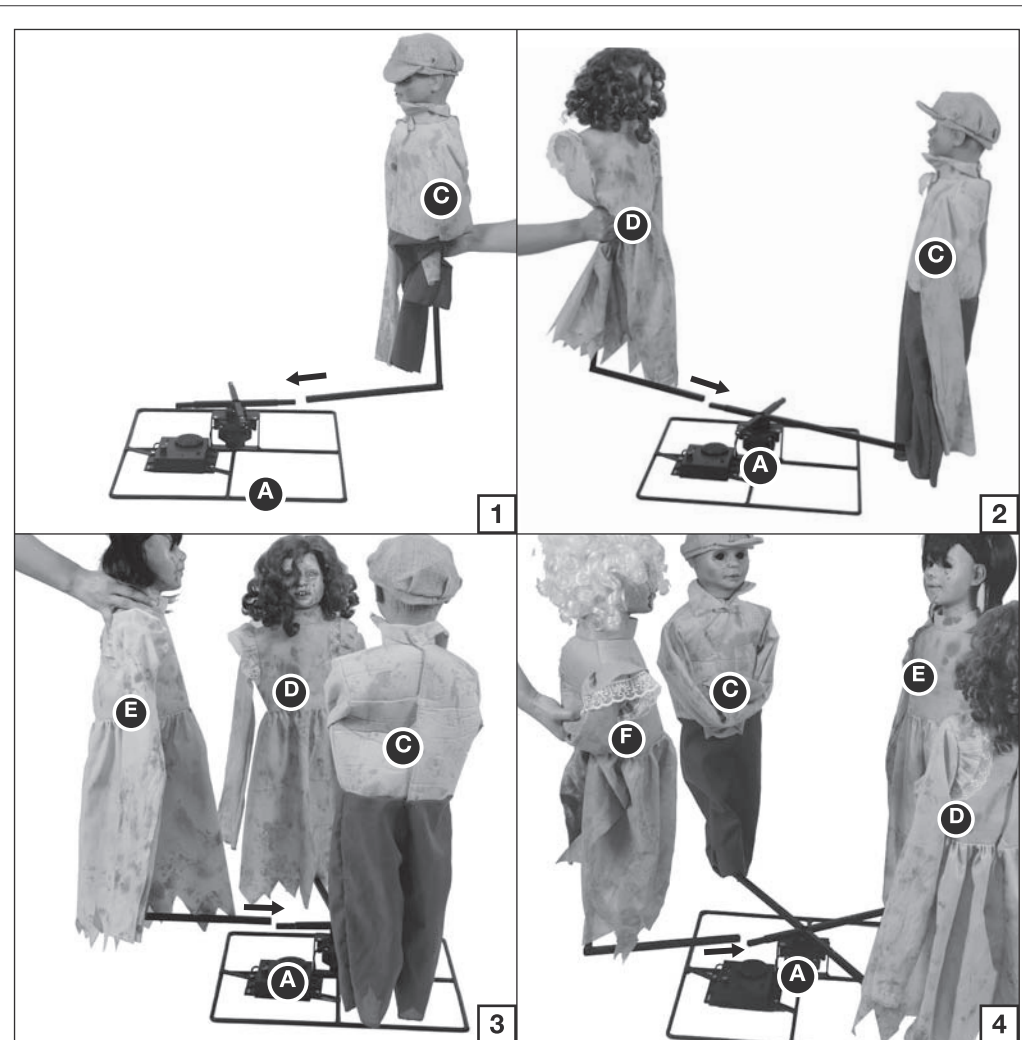


STEP 2

Attach the (C) Boy to the (A) Base by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 1.


Attach the (D) Girl-1 to the (A) Base by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 2.

Attach the (E) Girl-2 to the (A) Base by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 3.

Attach the (F) Girl-3 to the (A) Base by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 4.

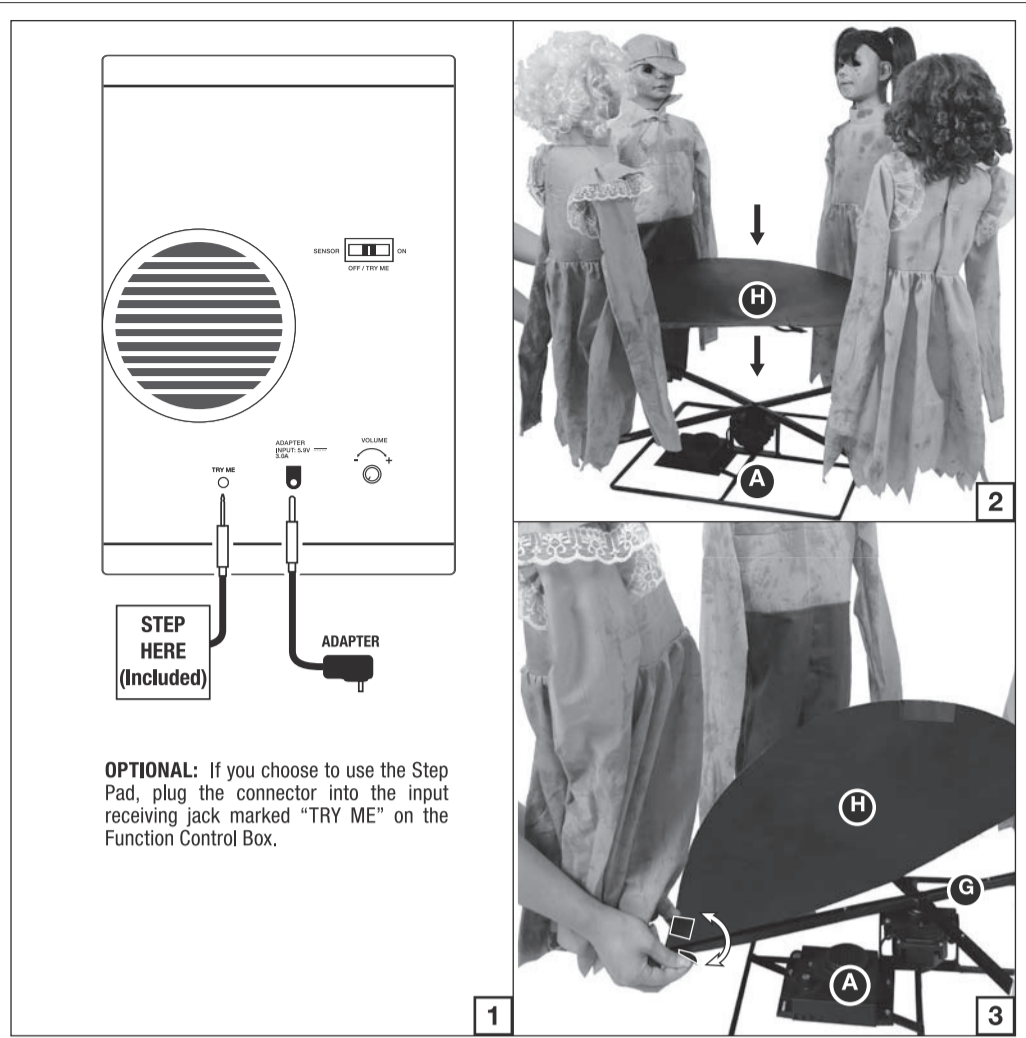

STEP 3
 Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box. Attach the (H) Circular Disc to the (A) Base as shown in Figure 2. Secure the (H) Circular Disc to the (G) Support Poles with the hook & loop closures as shown in Figure 3.

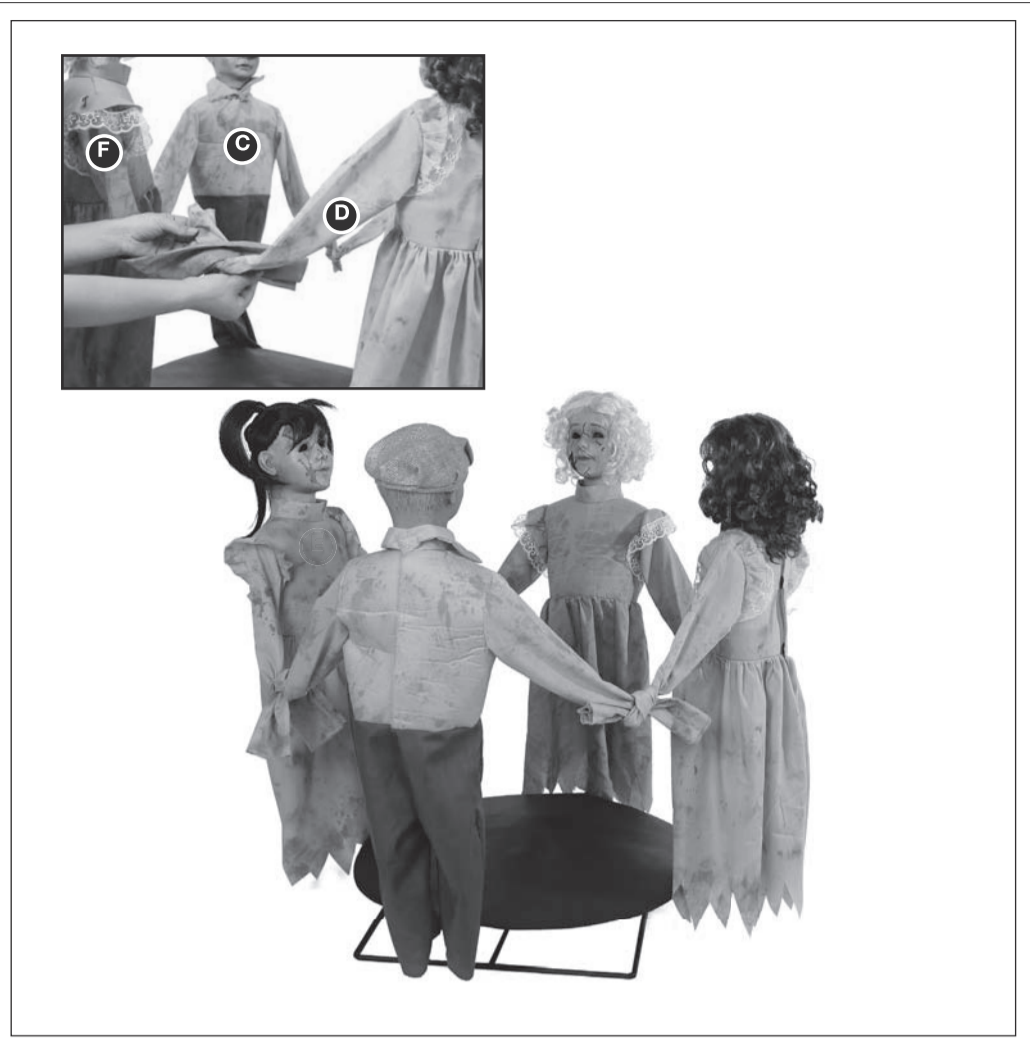

STEP 4
 Tie the left sleeve of the (C) Boy to the right sleeve of the (E) Girl-2 using a square knot. Second tie the left sleeve of the (E) Girl-2 to the right sleeve of the (D) Girl-1 using a square knot. Third tie the left sleeve of the (D) Girl-1 to the right sleeve of the (F) Girl-3 using a square knot. Then tie the left sleeve of the (F) Girl-3 to the right sleeve of the (C) Boy using a square knot. Ring Around the Rosie is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Base, as desired.

2. Settings:
 On: This setting allows the item to run continuously.
 Off/Try-Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try-Me activation. Refer to Assembly Instructions Step 3 for further details.
 Sensor: This switch mode will activate sound and animation when the sound sensor is activated and will operate for 1 audio-cycle with each activation. The sound sensor will activate when it detects sound.

: Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures; Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

