

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-124632 Haunted Ferris Wheel

Please follow the step by step guide and enjoy your Haunted Ferris Wheel!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base
 - B. Lower Support Poles x 2
 - C. Support Pole with Slots
 - D. Support Pole with Slots & Function Box
 - E. Motor Frame
 - F. Right Support Poles x 5
 - G. Left Support Poles x 5
 - H. Right Function Box Cover
 - I. Left Function Box Cover
 - J. Ties x 8
 - K. Gondolas x 5
 - L. Gondola Supports x 5
 - M. Gondola Poles x 5
 - N. Clown-1
 - O. Clown-2
 - P. Clown-3
 - Q. Clown-4
 - R. Clown-5
 - S. Step Pad
 - T. Adapter (Included)
- Input: 100 - 240VAC 50/60Hz
Output: 5.9V 1.5A

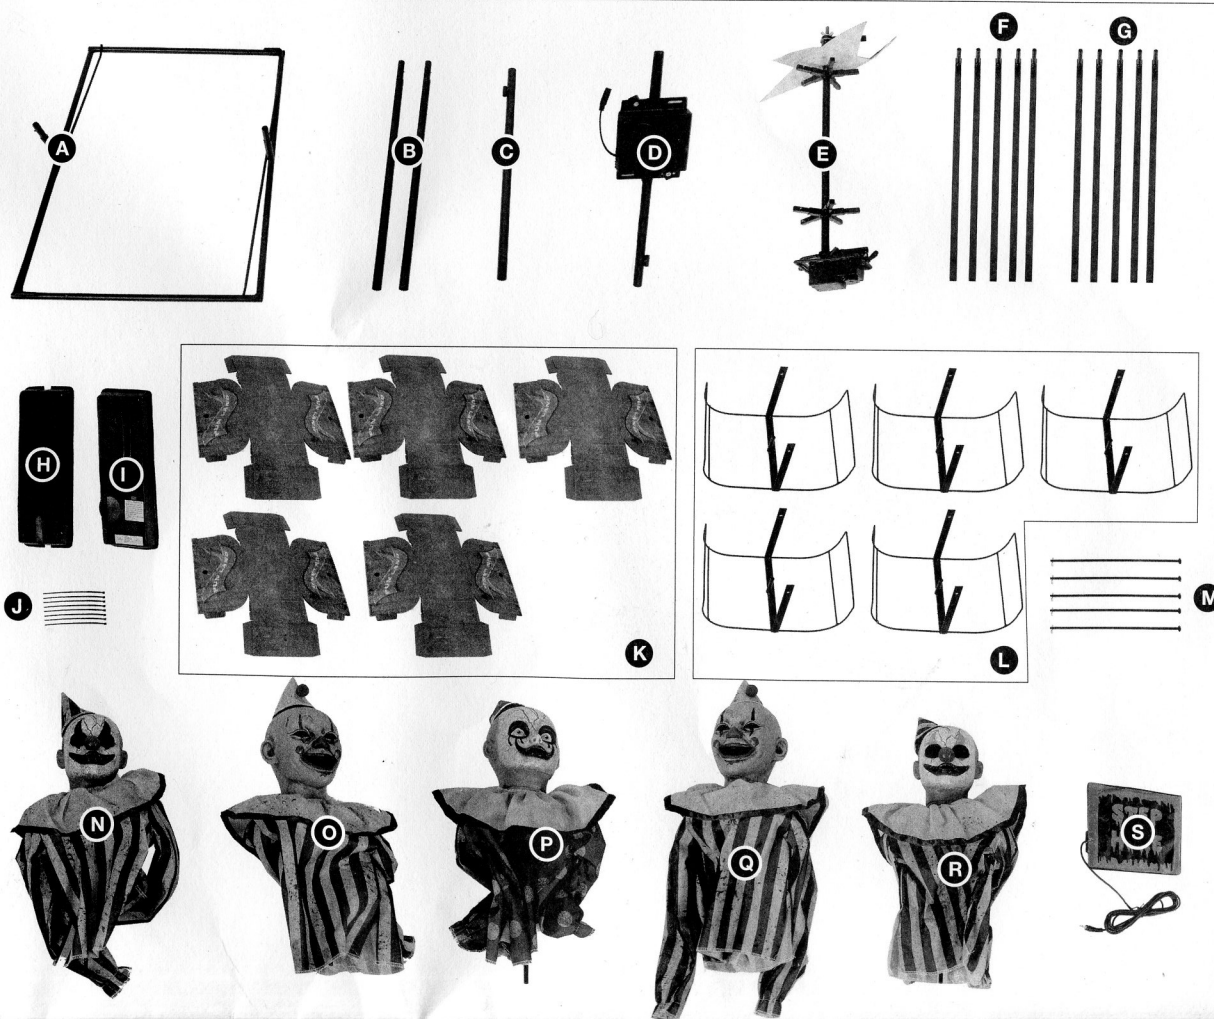


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM, OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

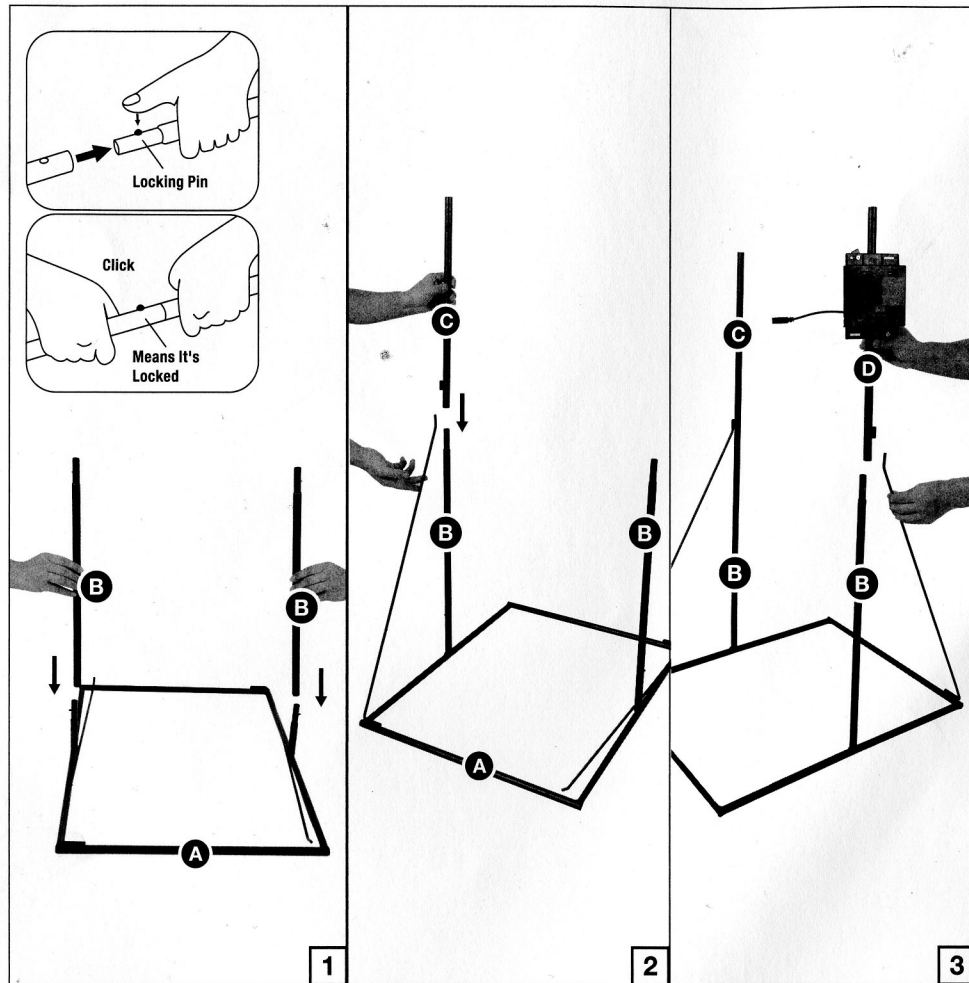


STEP 1

Attach the (B) Lower Support Poles to the (A) Base and secure by aligning the quick-connect push buttons into the pre-drilled holes as shown in Figure 1.
Set the braces located on the (A) Base into the slot housings located on the (C) Support Pole with Slots. Assemble the (C) Support Pole with Slots to the (B) Support Pole by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 2.
Set the braces located on the (A) Base into the slots housings located on the (D) Support Pole with Slots & Function Box. Assemble the (D) Support Pole with Slots & Function Box to the (B) Support Pole by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 3.

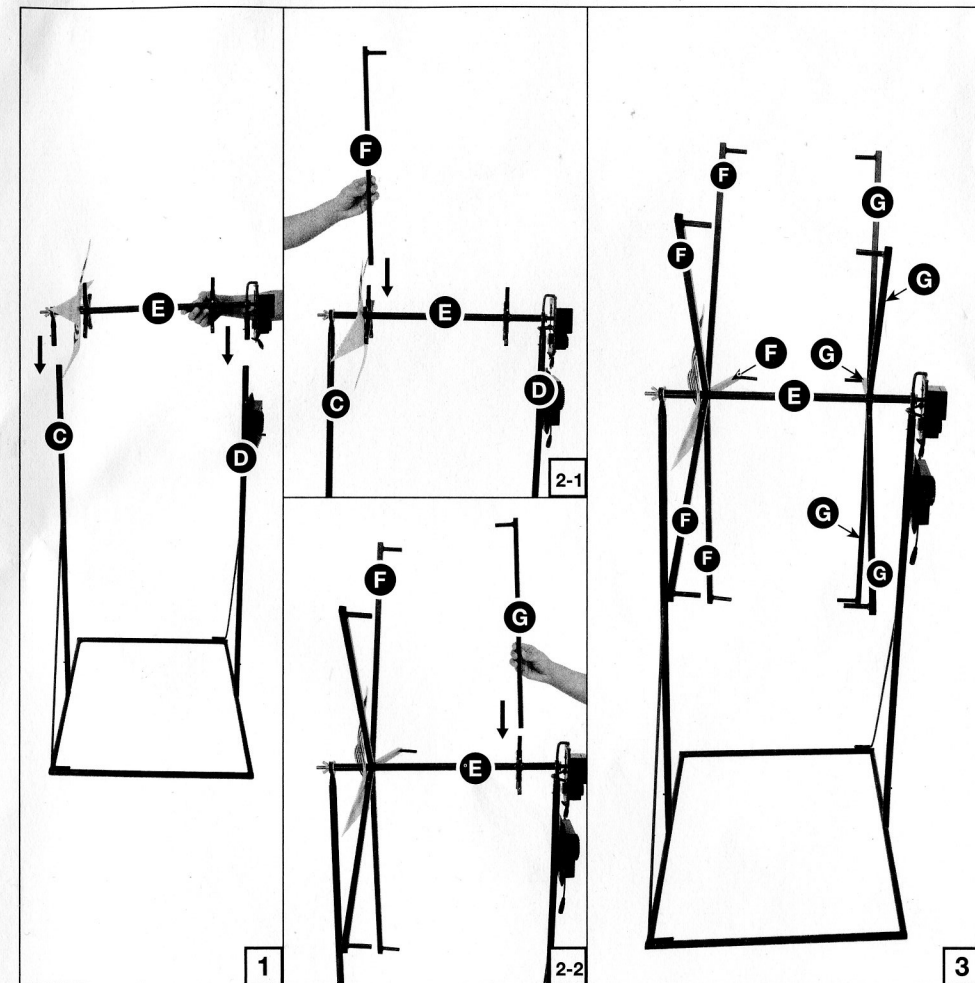

STEP 2

Attach the (E) Motor Frame to the (C) Support Pole with Slots & (D) Support Pole with Slots & Function Box and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 1.
Attach the (F) Right Support Poles to the (E) Motor Frame and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 2-1.
Attach the (G) Left Support Poles to the (E) Motor Frame and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 2-2.

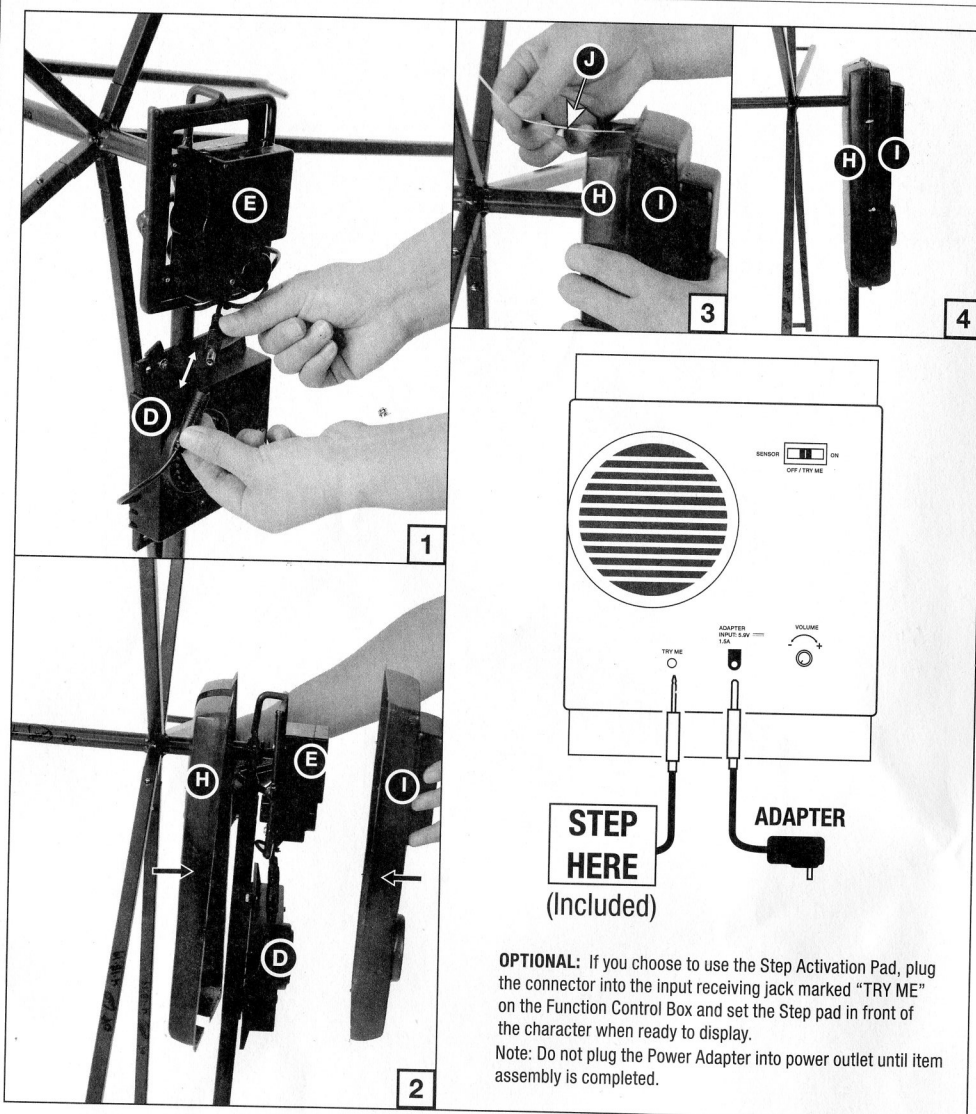


STEP 3

Connect the cable from the (D) Support Pole with Slots & Function Box to the color-coordinated cable on the (E) Motor Frame as shown in Figure 1.

Attach the (H) Right Function Box Cover & the (I) Left Function Box Cover onto the (D) Support Pole with Slots & Function Box & (E) Motor Frame as shown in Figure 2.

Then use the (J) Ties to tie the (H) Right Function Box Cover & the (I) Left Function Box Cover as shown in Figure 3 & 4.

Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box and route the Power Adapter down and out the bottom of the item.




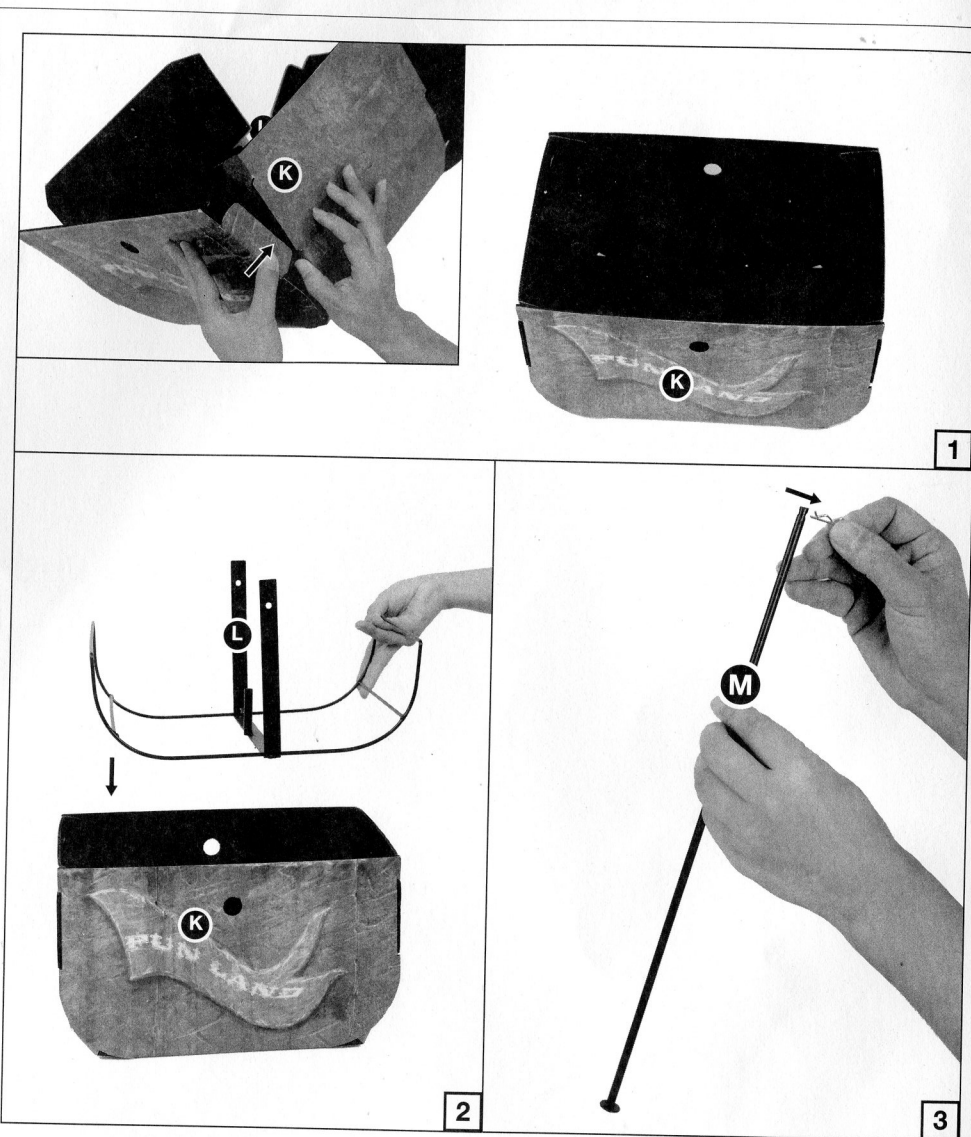


STEP 4

Fold the (K) Gondola as shown in Figure 1.

Put the (L) Gondola Support into the (K) Gondola as shown in Figure 2.

Pull out the Pin located on the (M) Gondola Pole as shown in Figure 3.

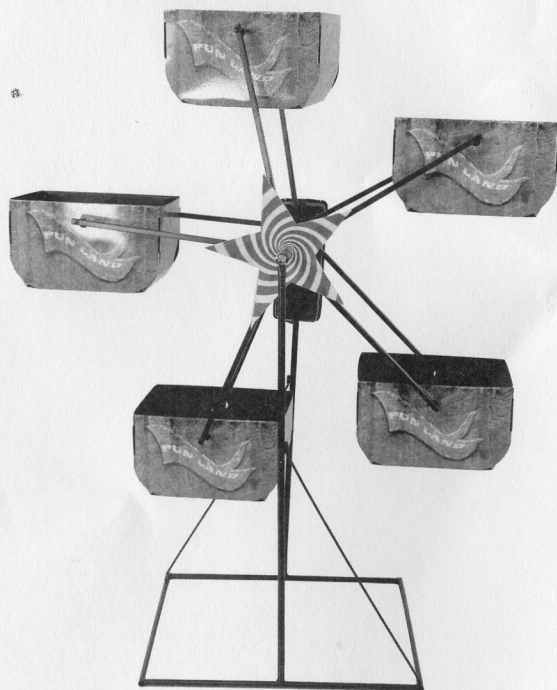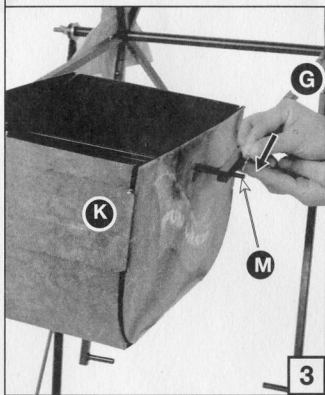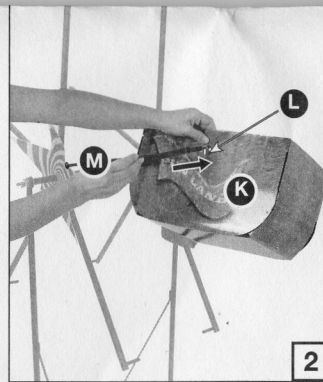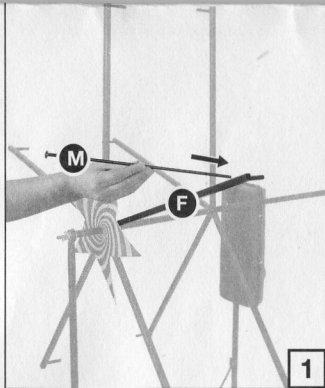


STEP 5

Put the (M) Gondola Poles through the (F) Right Support Poles as shown in Figure 1. Continue to put the (M) Gondola Poles through the (K) Gondolas, (L) Gondola Support & the (G) Left Support Poles as shown in Figure 2 & 3. Then insert the Pin into the hole of the available peg on the (M) Gondola Pole to fasten them in place as shown in Figure 3.



STEP 6

Attach (N) Clown-1, (O) Clown-2, (P) Clown-3, (Q) Clown-4, and (R) Clown-5 to the (L) Gondola Supports as shown in Figure 1, 2,3,4,5.

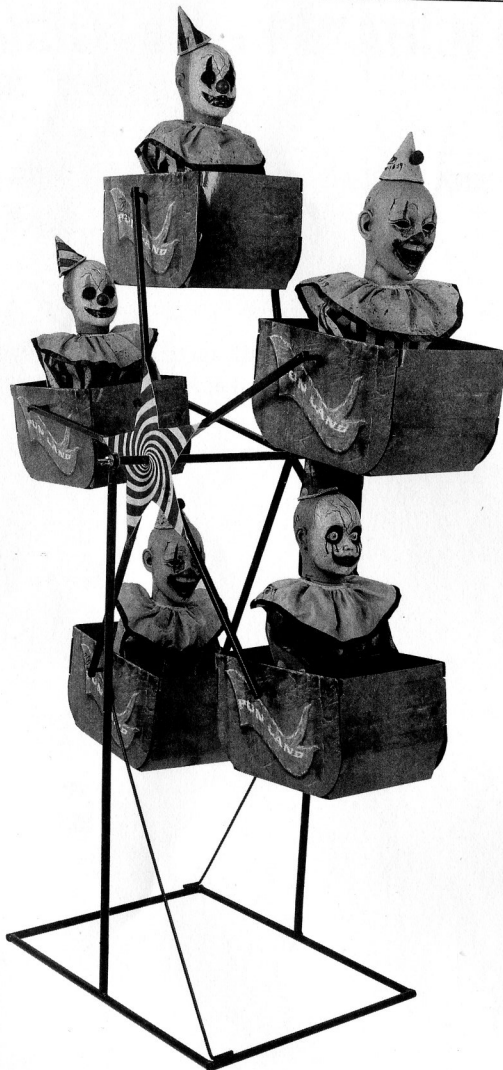

Your Haunted Ferris Wheel is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.

2. Settings:

Sensor: This switch mode will only activate sound and animation when the sensor is activated by sound. The item will operate for 1 audio-cycle with each sensor activation.

○ / OFF / Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step3 for further details.

I / ON : This switch mode will continuously operate the sound and animation of the item.



+ : Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

