

# EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-124911 Lunging Witch With Digit Eyes



Please follow the step by step guide and enjoy your Lunging Witch With Digit Eyes!

## CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packaging. Keep away from heat and moisture.

## WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

## PARTS LIST

- A. Base x 1
  - B. Lower Support Poles x 2
  - C. Upper Support Poles x 2
  - D. Dress x 1
  - E. Hip Hoop x 1
  - F. Torso Frame x 1
  - G. Shoulder Frame x 1
  - H. Blouse x 1
  - I. Sensor x 1
  - J. Right Arm x 1
  - K. Left Arm x 1
  - L. Head x 1
  - M. Staff Poles x 3
  - N. Skull Topper x 1
  - O. Cape x 1
  - P. Hat x 1
  - Q. Step Pad x 1
  - R. Universal Adapter (Included)
- Input: 100 - 240V AC 50/60Hz  
Output: 5.9V 3.0A

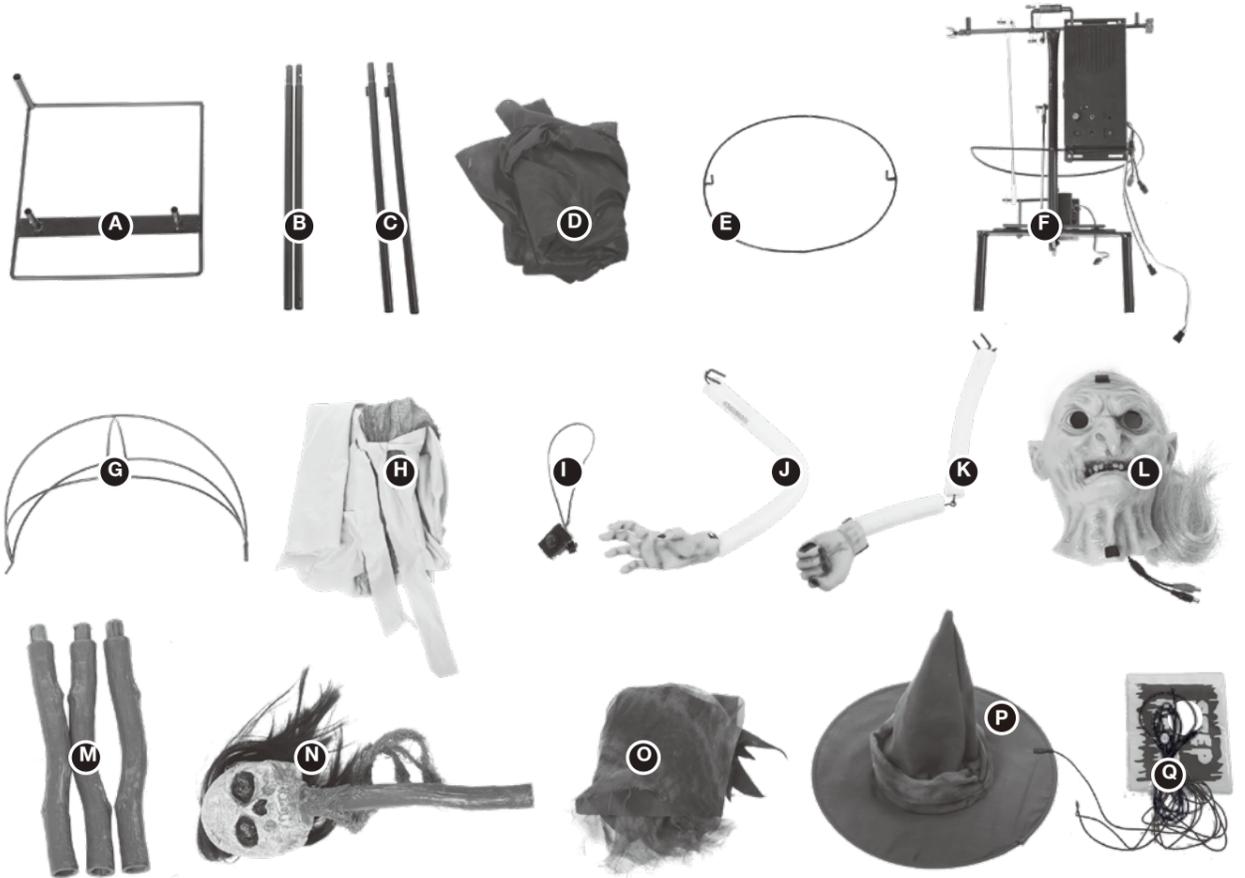

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT [SUPPORT@MORRISCOSTUMES.COM](mailto:SUPPORT@MORRISCOSTUMES.COM), OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

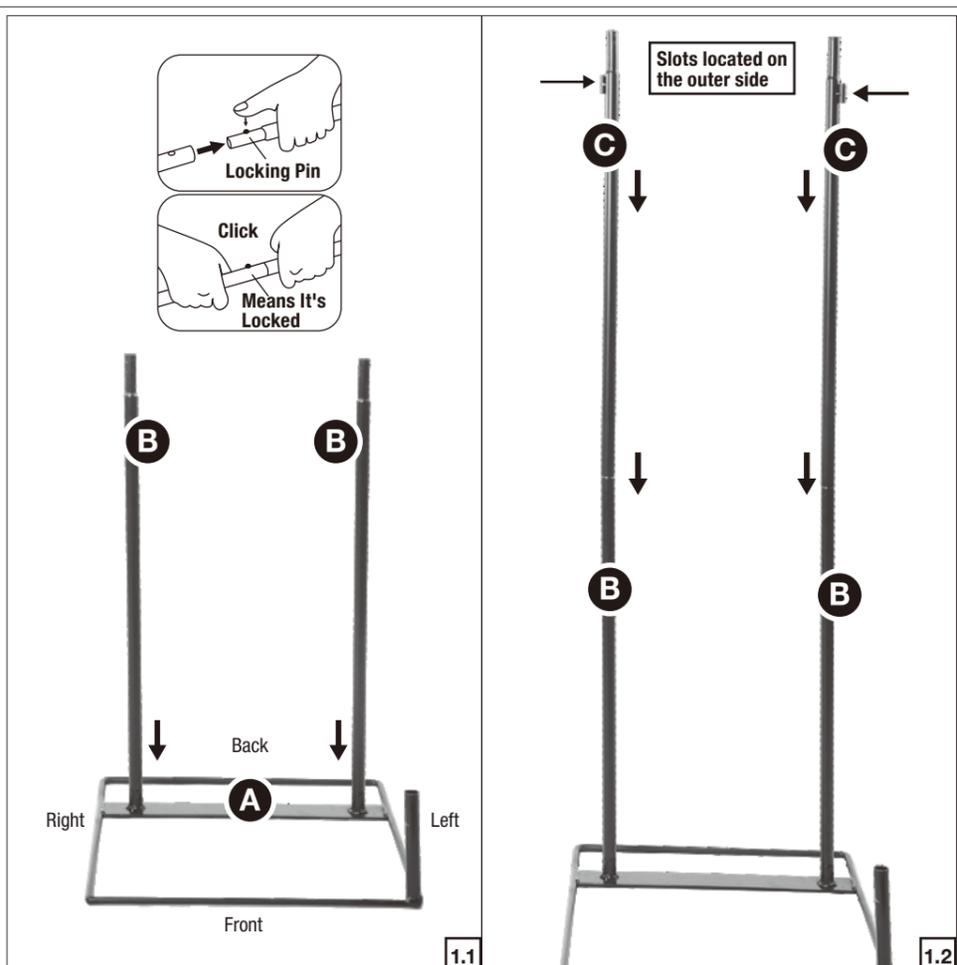

### STEP 1

NOTE: Throughout the instructions, Right and Left are relative to the character. First, assemble the (B) Lower Support Poles to the (A) Base, and secure by aligning the quick-connect push buttons into the pre-drilled holes as shown in Figure 1.1.

Now assemble the (C) Upper Support Pole to the (B) Lower Support Pole as shown in Figure 1.2.


NOTE: Slots located on the outer sides of the (C) Upper Support Poles.



### STEP 2

Lower the (D) Dress down over the (C) Upper Support Poles as shown in Figure 2.1.

Attach the (E) Hip Hoop through the slot housing on the outside of the (C) Upper Support Poles. Pull elastic band at the top of the (D) Dress over the top of (E) Hip Hoop as shown in Figure 2.2.

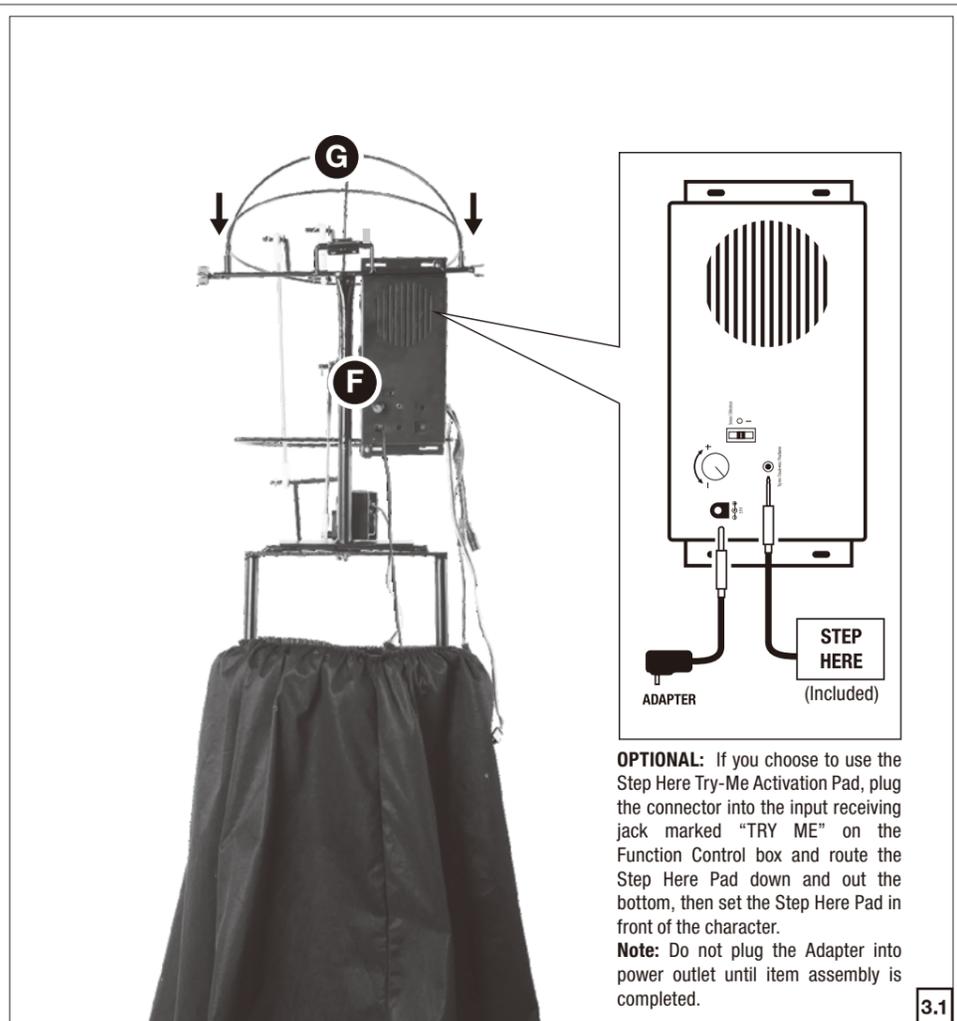


**OPTIONAL:** If you choose to use the Step Here Try-Me Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control box and route the Step Here Pad down and out the bottom, then set the Step Here Pad in front of the character.  
**Note:** Do not plug the Adapter into power outlet until item assembly is completed.

3.1

**STEP 3**


**NOTE:** The speaker on the Function Control Box located on the (F) Torso Frame should be facing front.  
 Attach the (F) Torso Frame on top of the (C) Upper Support Pole and secure by aligning the quick-connect push buttons into the pre-drilled holes. Slide the (G) Shoulder Frame into the slots available at the top of the (F) Torso Frame as shown in Figure 3.1.  
 Now, plug the Power Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box.

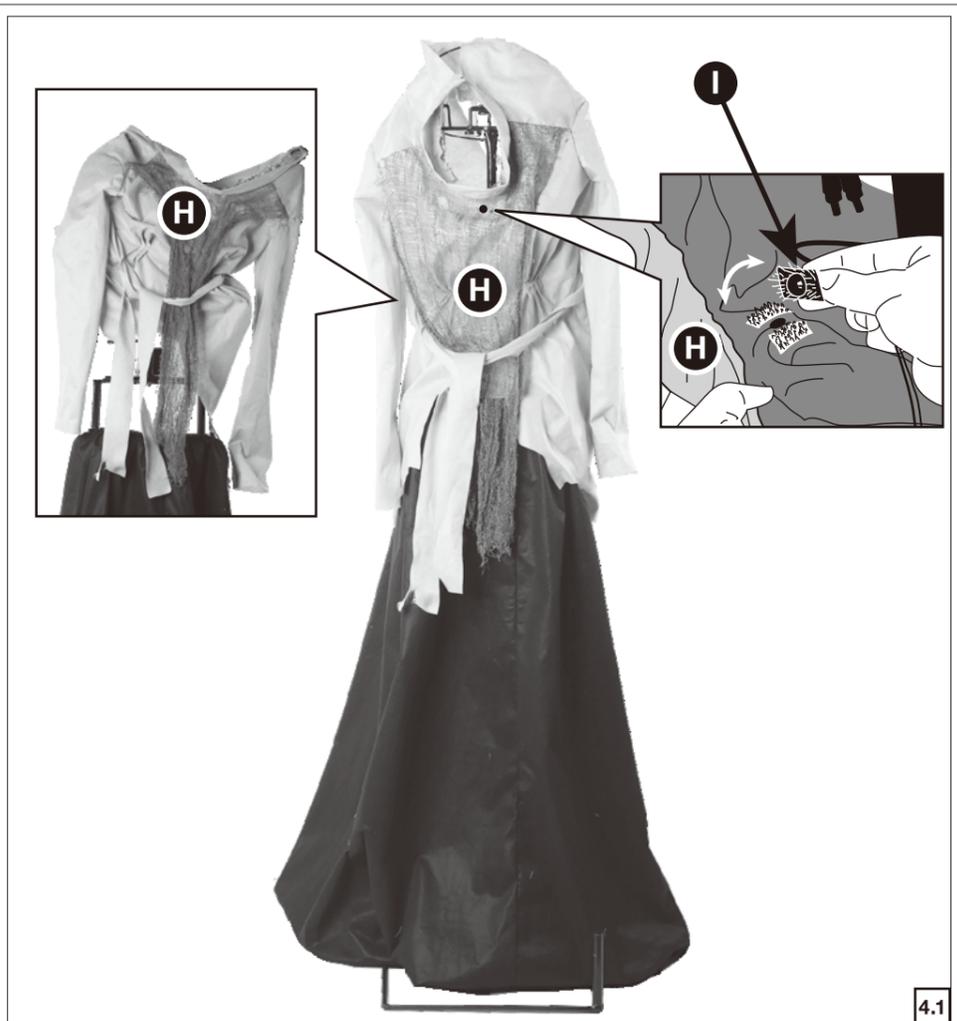

4.1

**STEP 4**


Place the (H) Blouse over the (G) Shoulder Frame and (F) Torso Frame as shown. Secure the (I) Sensor to the (H) Blouse with the hook and loop closures inside the (H) Blouse as shown in Figure 4.1.

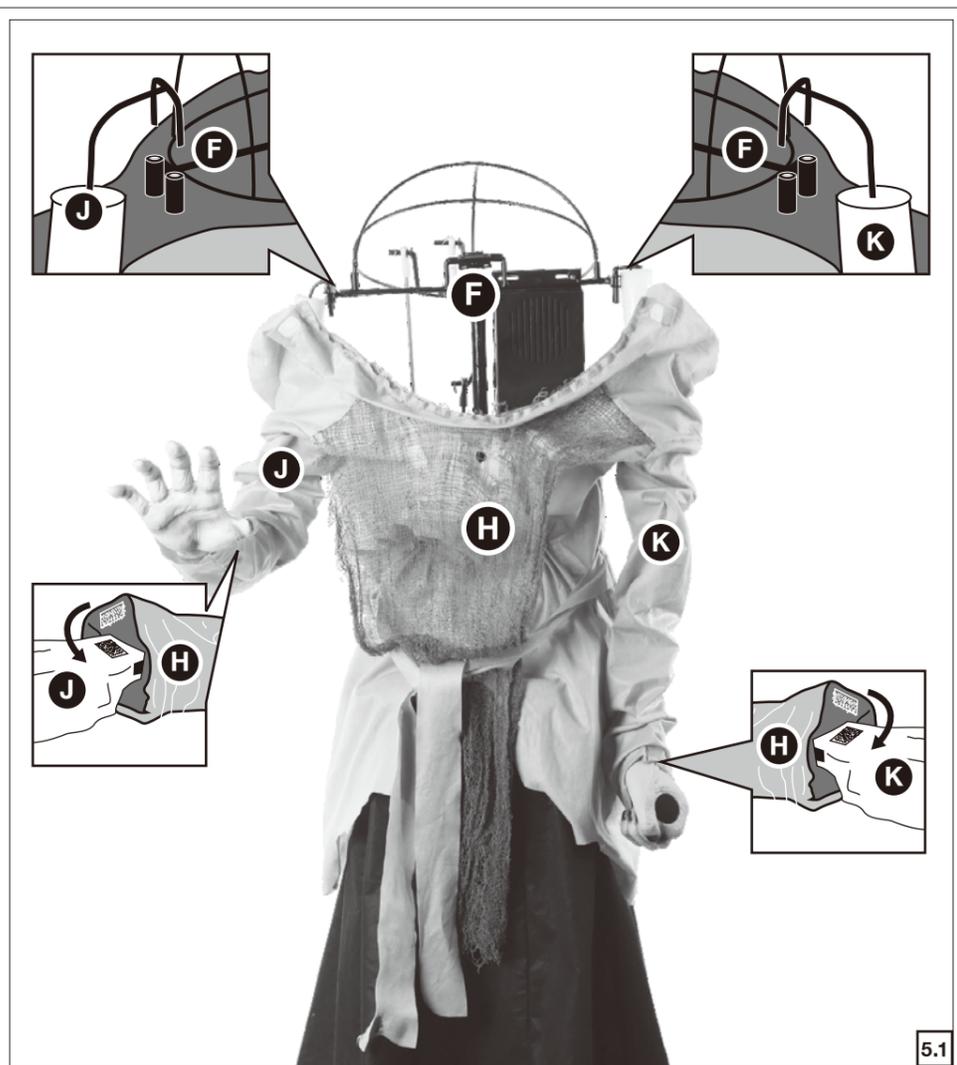

5.1

**STEP 5**


Slide the (J) Right Arm up through the right sleeve and slide the forked-hook into the right "shoulder" slot housing on the (F) Torso Frame. Slide the (K) Left Arm up through the left sleeve and slide the forked-hook into the left "shoulder" slot housing on the (F) Torso Frame.  
 Now, locate the hook & loop closures at the inside of both sleeves of the (H) Blouse and secure to the hook & loop closures at both wrists as shown in Figure 5.1.

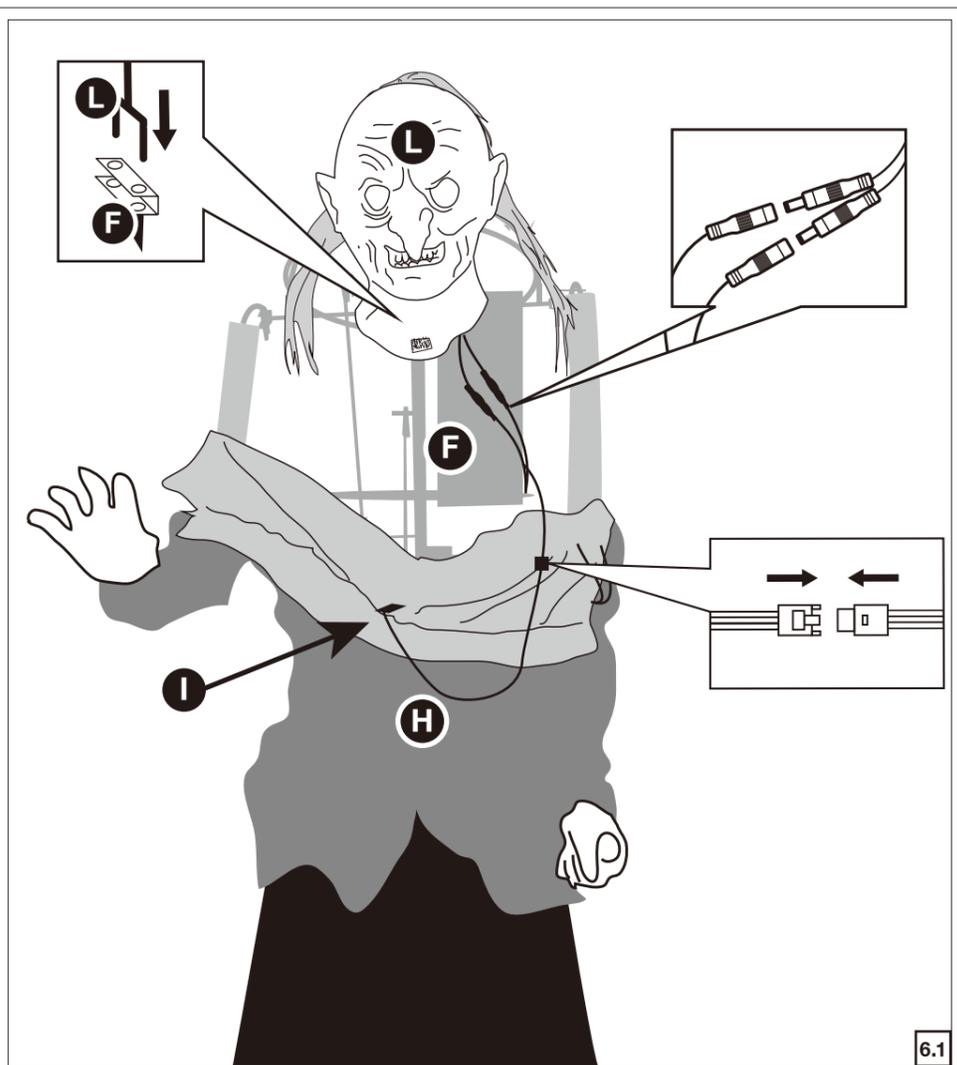

6.1

**STEP 6**


Set the (L) Head onto the (F) Torso Frame as shown. Connect the cables from the (L) Head to the coordinating cables on the Function Control box on the (F) Torso Frame as shown. Connect the sensor cable from the (I) Sensor to the coordinating cable on the Function Control box on the (F) Torso Frame as shown in Figure 6.1.

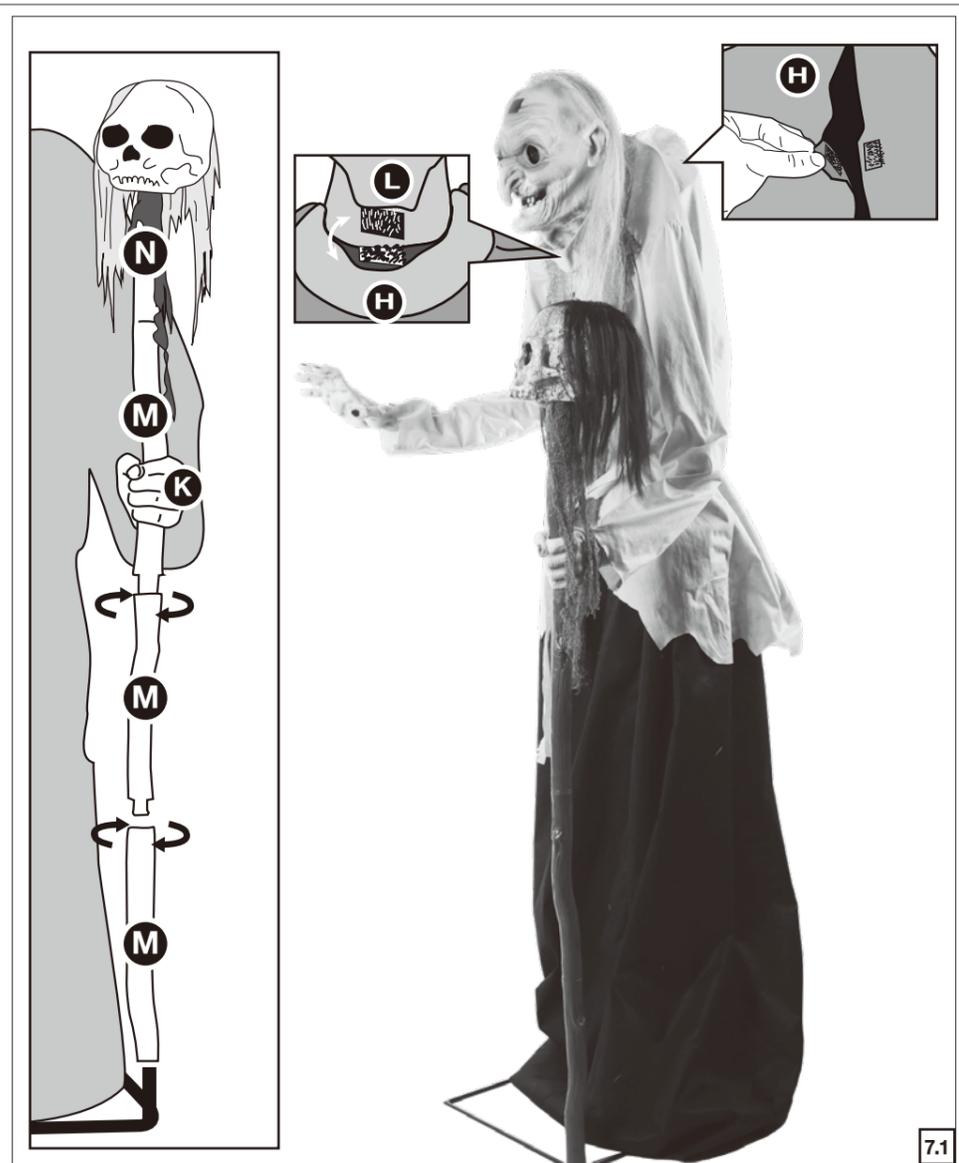

7.1

**STEP 7**

Assemble two pieces of the (M) Staff Poles together and twist counter-clockwise to secure. Set the (M) Bottom Staff Pole onto the pole at the front of the (A) Base. Then slide the assembled poles through the hole of the hand on the end of the (K) Left Arm, located on the top of the assembled (M) Middle Staff Poles. Now assemble the (N) Skull Topper onto the assembled (M) Staff Poles as shown and ensure the skull is facing forward. Secure the (H) Blouse under the chin and at the back with the hook and loop closures as shown in Figure 7.1.

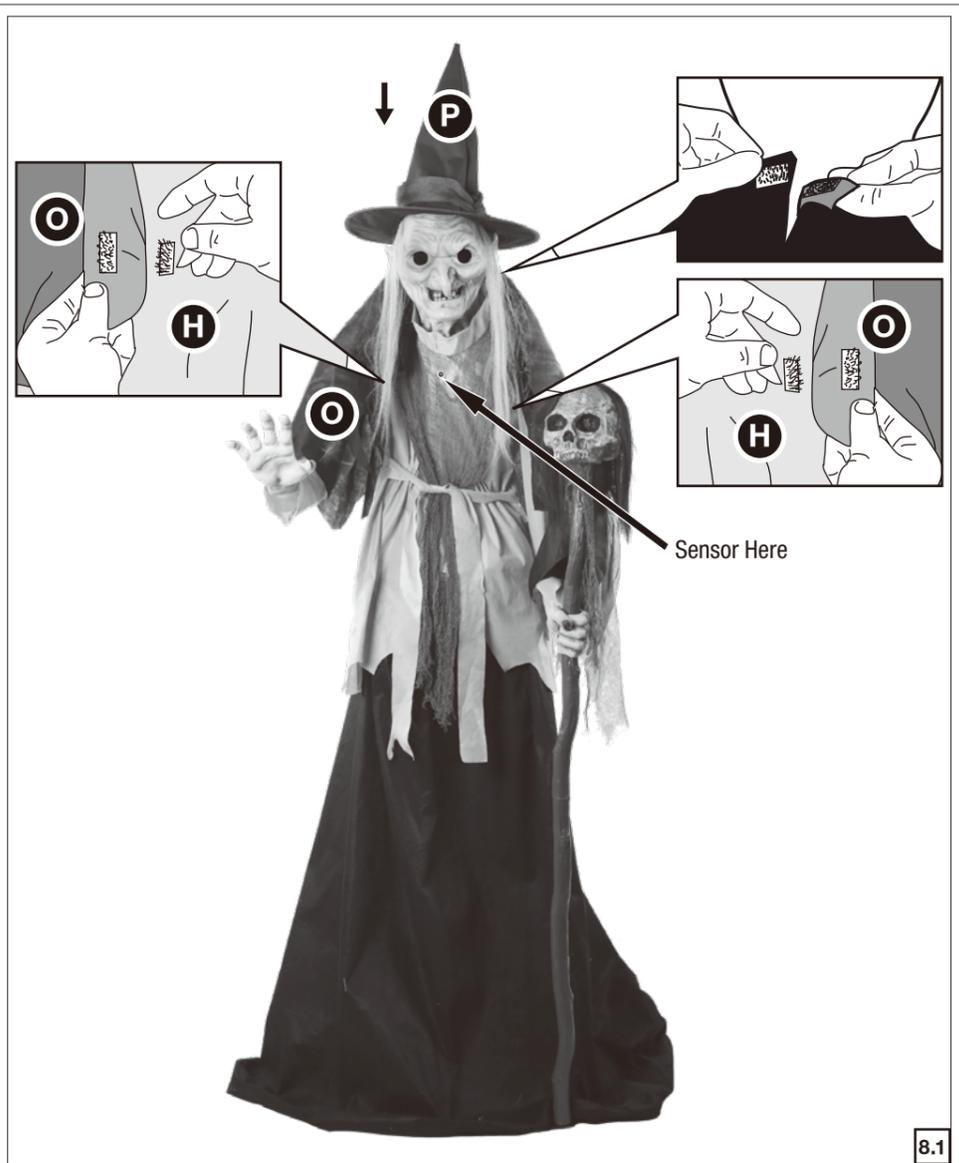

8.1

**STEP 8**

Set the (O) Cape onto the shoulders of the witch. Secure the (O) Cape to the (H) Blouse with the hook and loop closures at the front of the witch. Place the (P) Hat onto the (L) Head as shown in Figure 8.1. Your Lunging Witch With Digit Eyes is now fully assembled. Plug in and turn on to let the fun begin!

**OPERATION INSTRUCTIONS:**

1. Plug the Adapter into a standard power outlet and adjust the settings on the Function Control Box as desired.

2. Settings:

**Sensor:** This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

**O/OFF/Try Me:** This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.

**I / ON :** This switch mode will continuously operate the lights, sound, and animation of the item.

 : Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

