

EASY ASSEMBLY AND OPERATION INSTRUCTIONS



5127029 Cauldron Creep

This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Cauldron Creep!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.

WARNING: This product may contain a chemical known to the state of California to cause cancer, or birth defects or other reproductive harm.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.

1. Please use the applicable transformer or the one supplied by manufacturer.
2. Please install the product according to the instruction, the connecting wire should be connected in the correct color
3. Children should be supervised by adults when using the product and keep the transformer away from kids.
4. The transformer should be inspected regularly.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference

PARTS LIST

- A. Base
- B. Lower Support Poles x 2
- C. Upper Support Poles x 2
- D. Pants
- E. Torso Frame
- F. Hip Hoop
- G. Chest
- H. Back Support Shell
- I. Costume
- J. Head
- K. Right Arm
- L. Left Arm
- M. Cauldron
- N. Cauldron Support Poles x 6
- O. Cauldron Light Support Frame
- P-1. Top Stir Stick
- P-2. Middle Stir Stick
- P-3. Lower Stir Stick
- Q. Graveyard Fabric
- R. Step Here Activation Pad
- S. Fog Hose

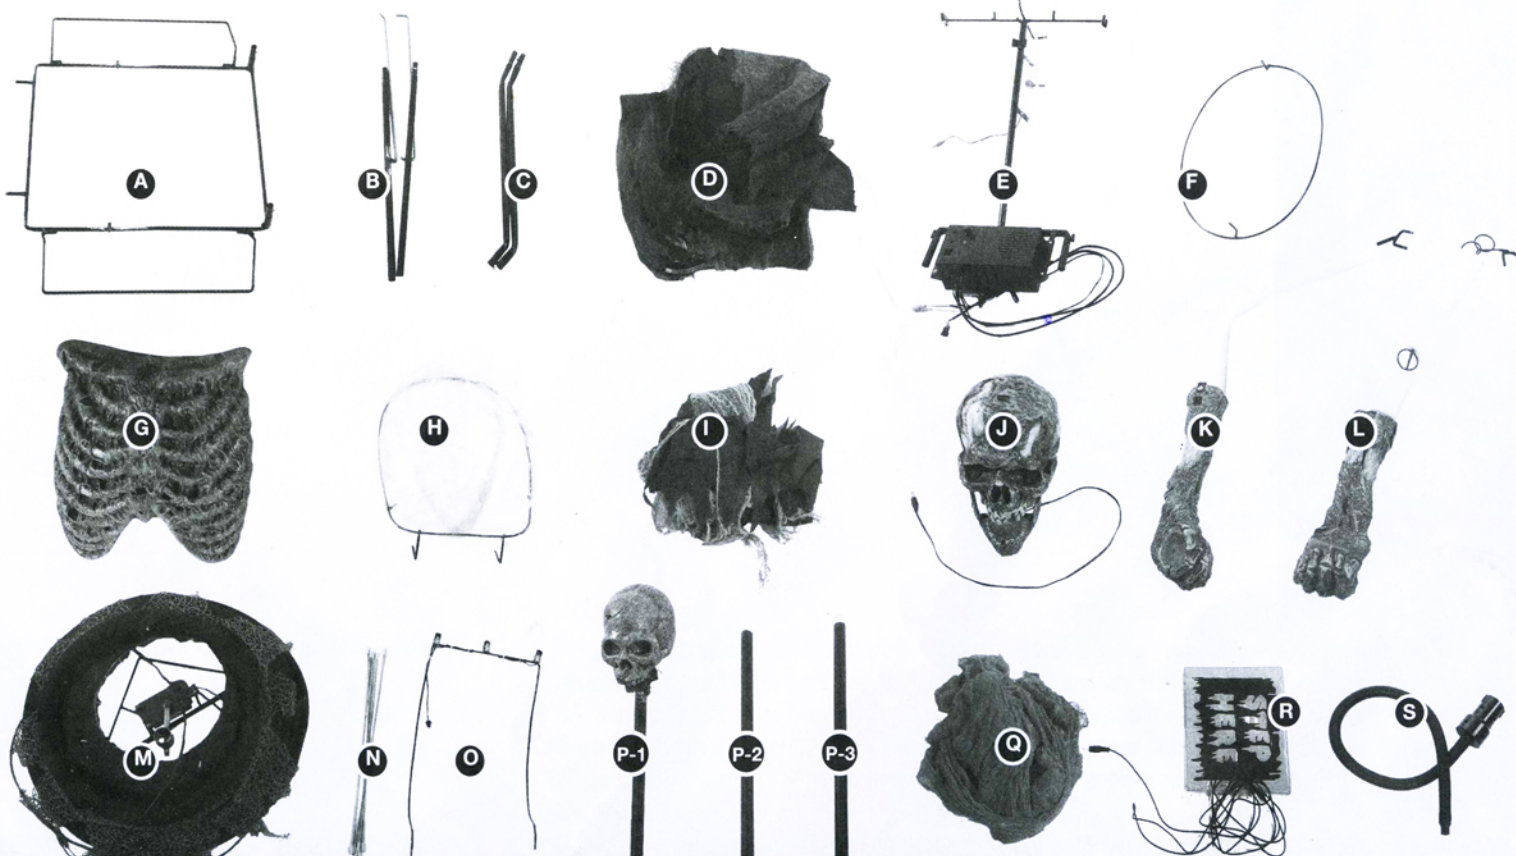


UL Adapter *

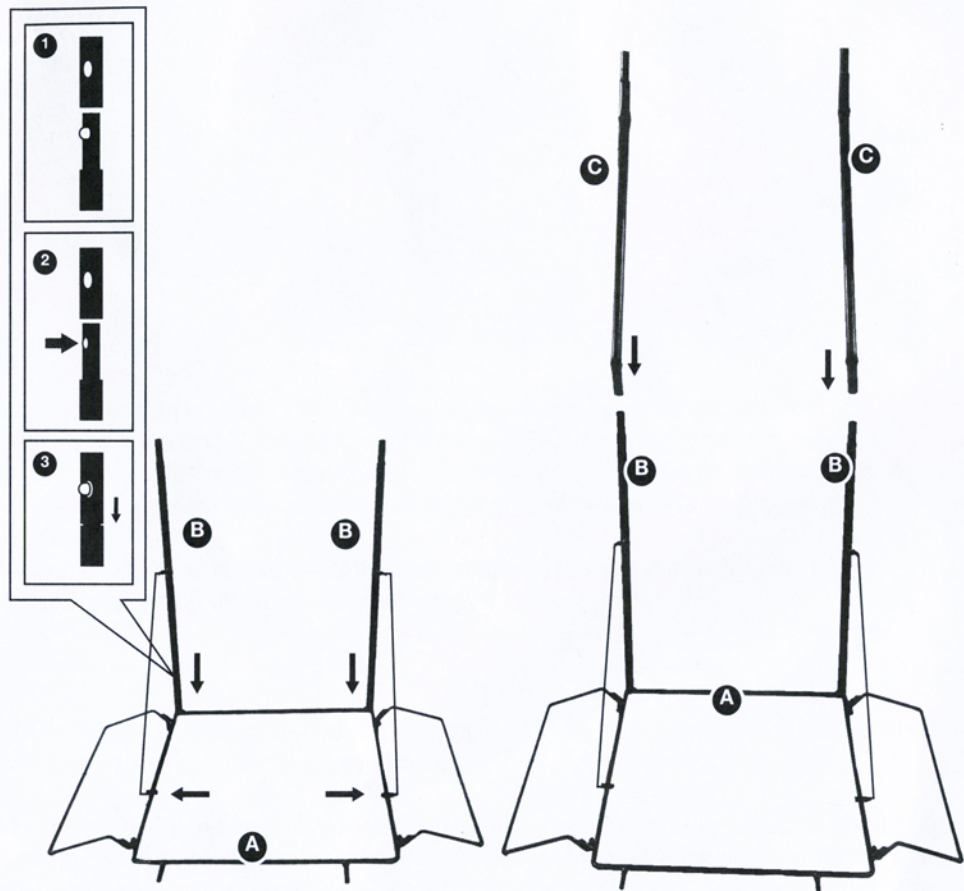

STEP 1

First, secure the (B) Lower Support Poles to the (A) Base by aligning the quick-connect push buttons into the pre-drilled holes. Then set the cross-braces located at the (B) Lower Support Poles into the slot housings on the (A) Base as shown, and Now assemble the (C) Upper Support Poles to the (B) Lower Support Poles as shown, and secure by aligning the quick-connect push buttons into the pre-drilled holes.

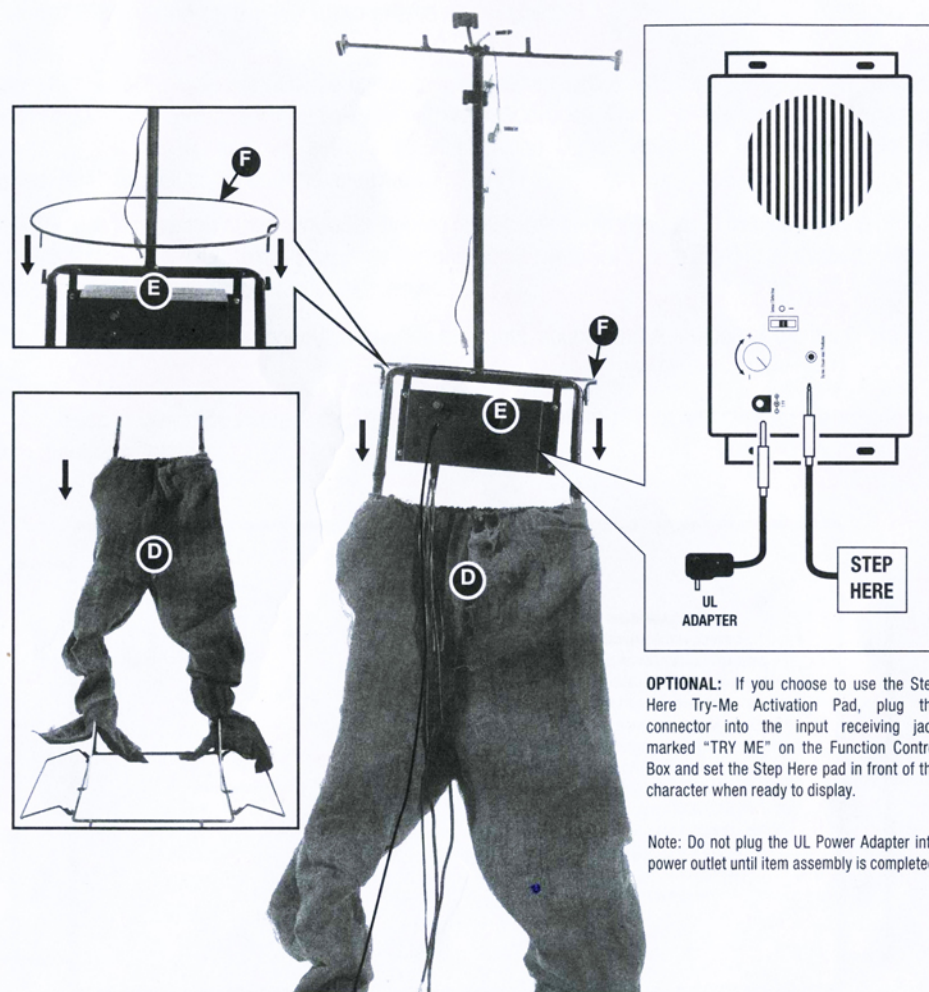


STEP 2


NOTE: The speaker on the Function Control Box located on the (E) Torso Frame should be facing front.
Slide the (D) Pants over the assembled (C/B) Support Poles as shown. Attach the (E) Torso Frame on top of the assembled (C/B) Support Poles and secure by aligning the quick-connect push buttons into the pre-drilled holes.
Next, attach the (F) Hip Hoop through the slots located on the (E) Torso Frame as shown. Plug the Adapter into the input DC 5.9V on the function control box.

OPTIONAL: If you choose to use the Step Here Try-Me Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step Here pad in front of the character when ready to display.


Note: Do not plug the UL Power Adapter into power outlet until item assembly is completed.

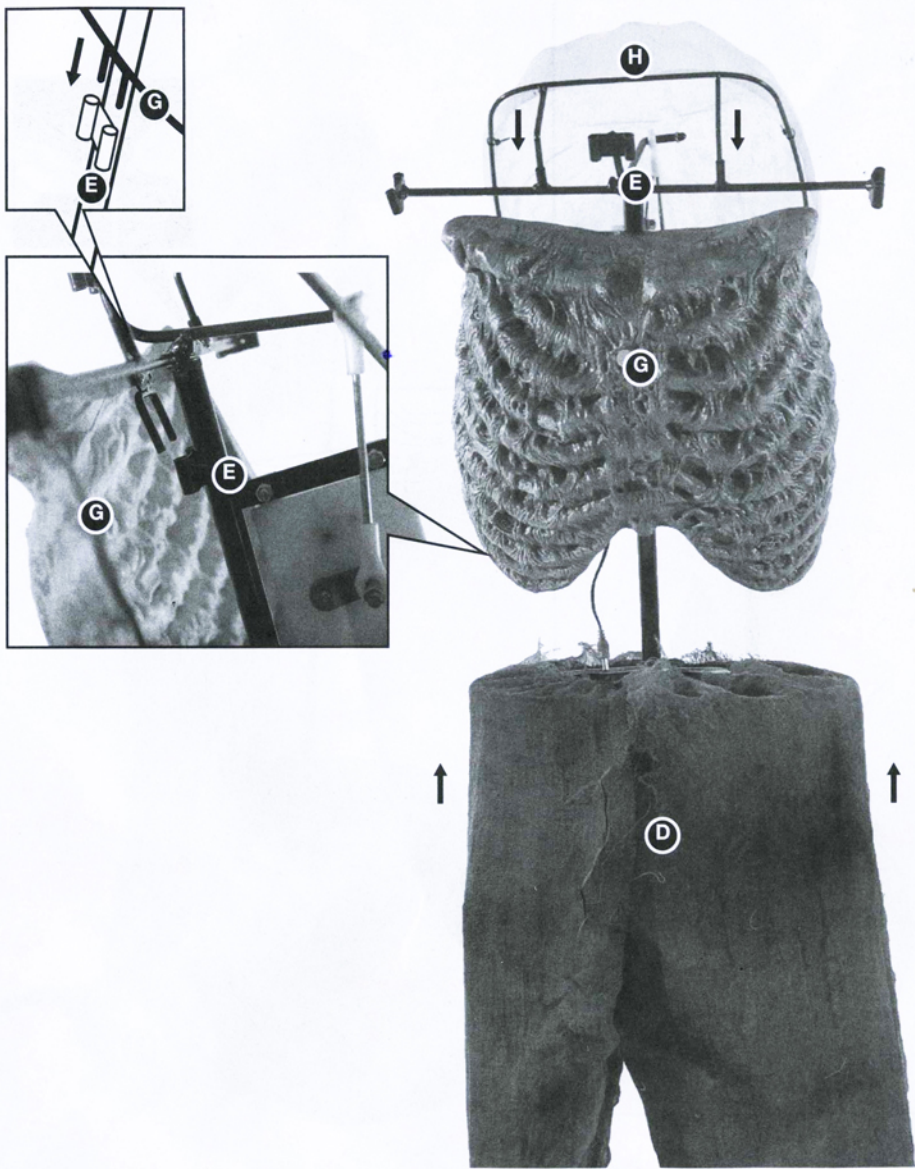


STEP 3
 Pull up the (D) Pants to cover the (F) Hip Hoop. Now set the (G) Chest into place by sliding the forked-hook into the center slot housing on the (E) Torso Frame as shown. Then attach the (H) Back Support Shell on the (E) Torso Frame.

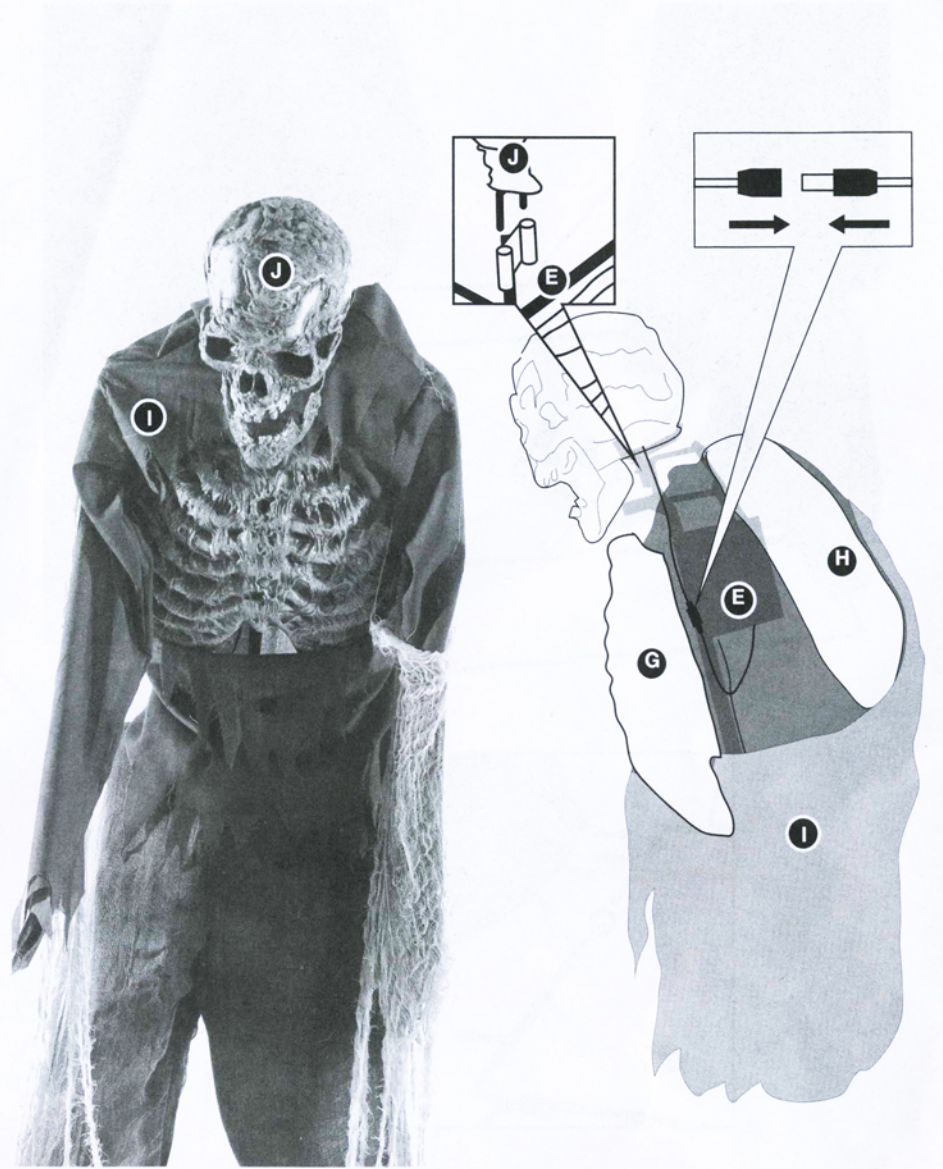

STEP 4
 Lower the (I) Costume down over the assembled (H) Back Support Shell & (E) Torso Frame as shown. Set the (J) Head onto the (E) Torso Frame by sliding the forked-hook into the "neck" slot housing on the (E) Torso Frame. Connect the cable from the (J) Head to small function box located the (E) Torso Frame as shown.


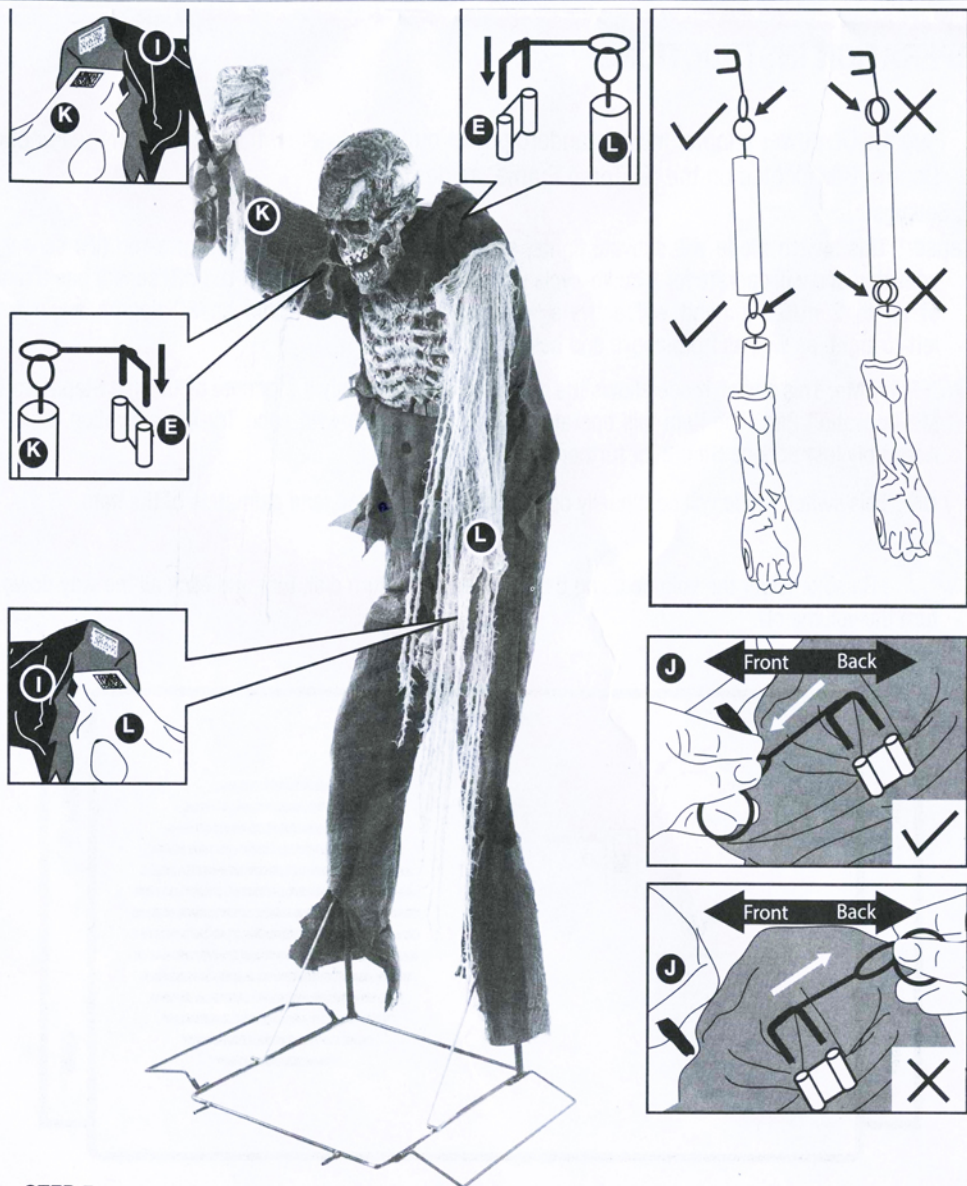


STEP 5
 Slide the (K) Right Arm up the Right sleeve of the (I) Costume and slide the forked-hook into the left "shoulder" slot housing on the (E) Torso Frame. Now, slide the (L) Left Arm up the Left sleeve of the (I) Costume and slide the forked-hook into the right "shoulder" slot housing on the (E) Torso Frame. Secure the hook & loop closures at both wrists. Make sure the circles of Arm joints don't overlap as shown and attach the arms from the front of the Creep.

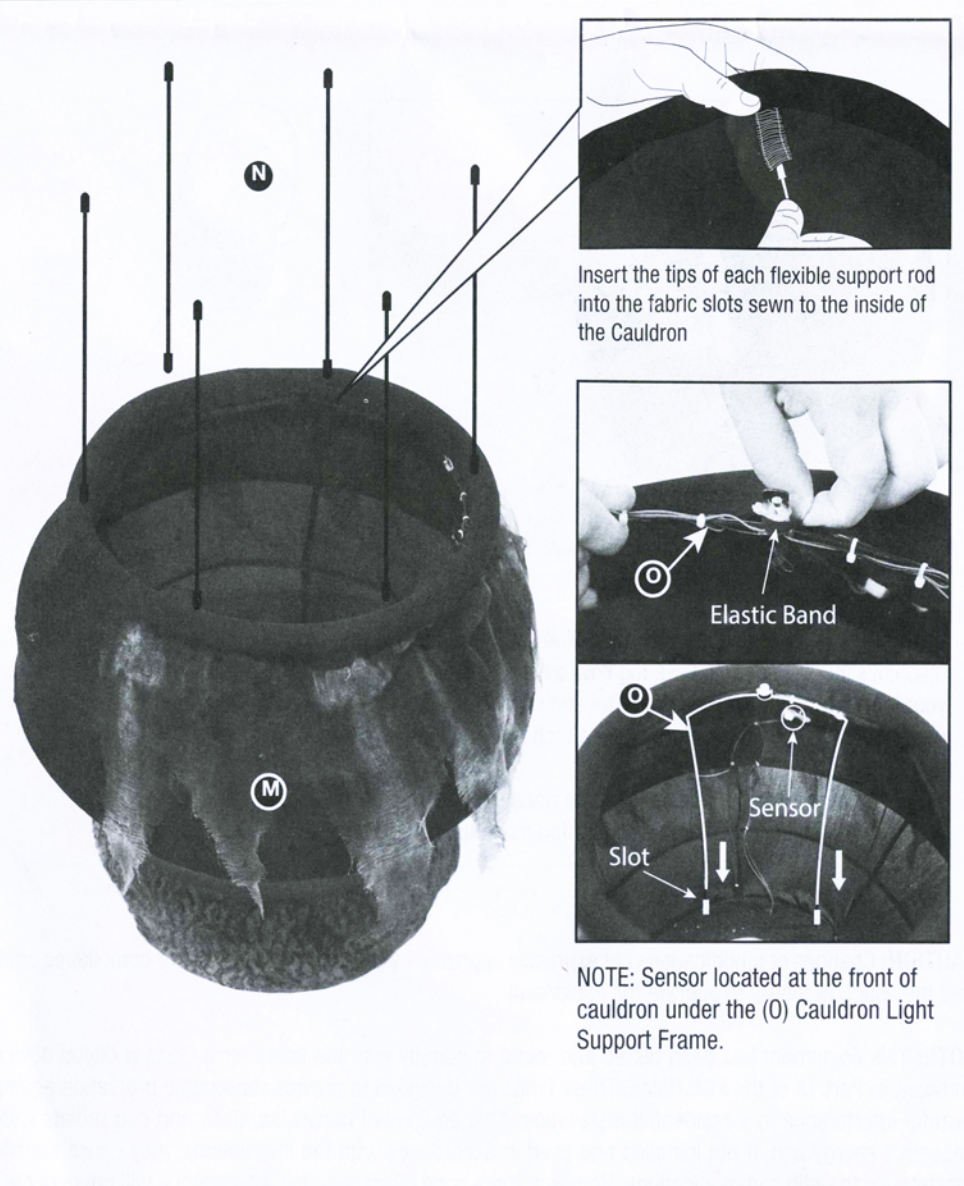


STEP 6
 Assemble the (M) Cauldron by sliding the ends of each (N) Cauldron Support Poles into the fabric pouches found at the top and bottom of the inside of the cauldron as shown. Attach the top center of the (O) Cauldron Light Support Frame on the top of the cauldron using elastic band as shown, and then insert Poles of the (O) Cauldron Light Support Frame into the slots located on the cauldron base as shown.

NOTE: Sensor located at the front of cauldron under the (O) Cauldron Light Support Frame.

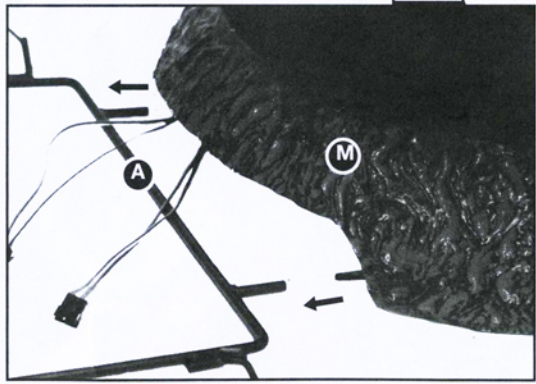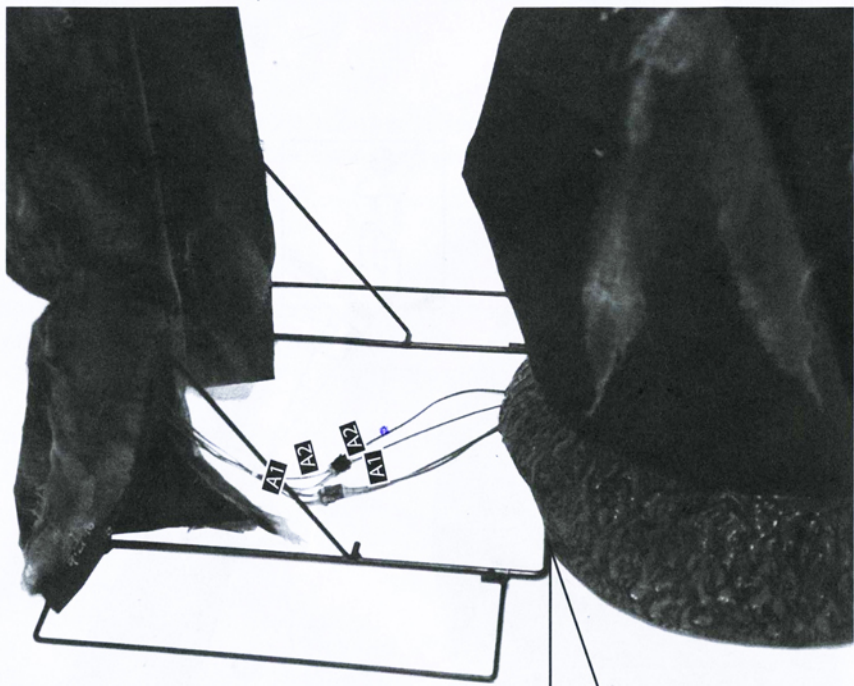



STEP 7

Set Assembled (M) Cauldron onto (A) Base by attaching the slots located at the front of (A) Base as shown. Connect A1, A2, two cables from the (M) Cauldron to the coordinating cables from the Function control box on (E) Torso Frame through pants as shown.

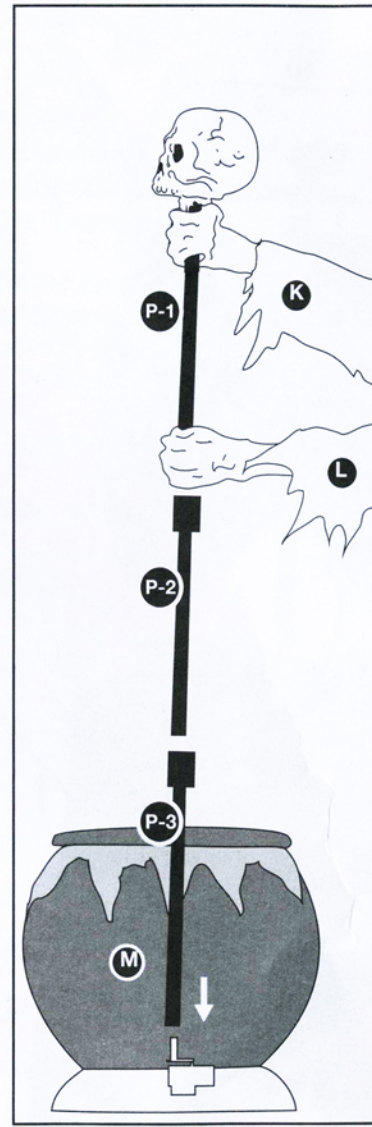

STEP 8

First, Slide the (Q-1) Top Stir Stick down through the hole in the hand of the (K) Right Arm and the hand of the (L) Left Arm as shown. Then slide the (Q-1) Top Stir Stick into the top of the (Q-2) Middle Stir Stick and slide the (Q-2) Middle Stir Stick into the top of the (Q-3) Lower Stir Stick as shown. Next, set the (Q-3) Lower Stir Stick into the mechanism located on the (M) Cauldron as shown. Drape the Hood over the (J) Head. Now secure the hook & loop closures at the back of the (I) Costume and the (G) Chest as shown. Spread (Q) Graveyard Fabric cover the cables and wrap the bottom of the (M) Cauldron.

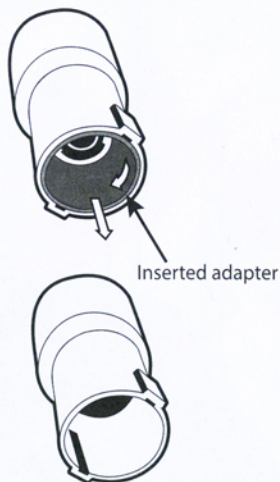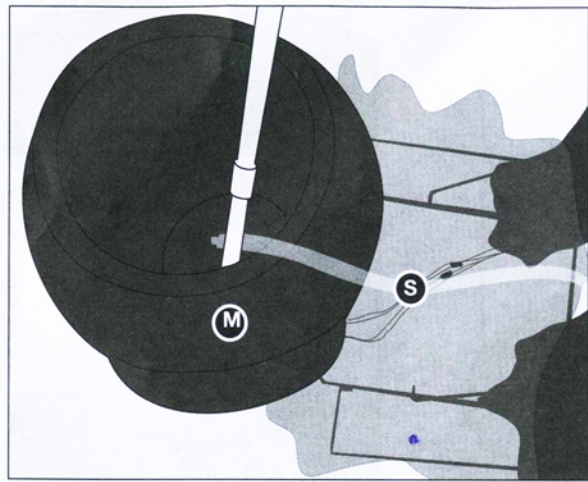

Optional: this item includes a fog hose that can be connected to most standard 400 Watt fog machines (not included) to have fog flow out of the cauldron. To achieve this function, simply set your fog machine behind the character and run the small end of the (S) Fog Hose over the base and under the bottom of the Cauldron, and attach the large end of the hose onto the nozzle of your fog machine.

NOTE: if the connector is too small for the nozzle of your fog machine, remove the inner adapter ring and re-connect to the nozzle of your fog machine.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures; Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

OPERATION INSTRUCTIONS:

1. Plug the UL power adapter into a standard power outlet and adjust the settings on the Function Control Box located on the (E) Torso Frame, as desired.

2. Settings:

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

O/OFF/Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try-Me activation. Refer to Assembly Instructions Step 2 for further details.

I / ON : This switch mode will continually operate the lights, sound, and animation of the item.

Volume Control: Raise or lower the volume using the volume control turn dial, turn and click all the way down to turn the volume off.

