 


# SITTING SCARECROW™

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

**WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING**

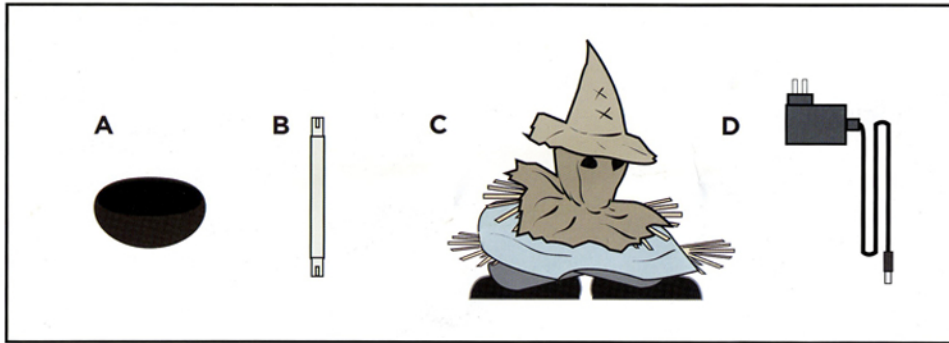

### Parts:

A: BOWL

B: POLE

C: HEAD WITH CLOTHES & BASE

D: 6V2A ADAPTER

1. Open the zipper located under the back of Sitting Scarecrow's™ pants and insert POLE into back of HEAD WITH CLOTHES & BASE. Snap lock POLE into the base of the neck. (Match A to A) Press POLE until it clicks into place. Insert POLE into BASE. (Match B to B) Press until it clicks into place.
  2. Connect wires located on BASE to wire located on BOWL. (Match C to C)
  3. Attach hook and loop fasteners on BOWL to hook and loop fasteners located on the pants.
- \* Note: Bowl must be level and have a light source above the bowl to enhance the motion sensor function.
4. Connect 6V 2A ADAPTER (included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on BASE.
  5. Turn the switch to the ON position to operate in Sound and Motion activation mode. Any sound or motion inside the candy bowl will activate the item. For MOTION ONLY, only motion inside the candy bowl will activate the item.
  6. Close zipper on the back of the Scarecrow's pants. Position the Scarecrow in chair (not included), and fill BOWL to lure Trick or Treaters for a scary surprise!

### OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

Follow steps #1 through 5 on initial installation first.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on top of the base.

2. Use volume knob on external speaker to control volume levels.

(go to instruction #6 to continue setup)

### OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

Follow steps #1 through 4 on initial installation first.

 
 
 
1. Connect the cable from optional footpad into jack labeled FOOTPAD on top of the base.

2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.

3. Step on the FOOTPAD to activate the scary sequence!

(go to instruction #6 to continue setup)

\* Footpads, adapters and all other accessories are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

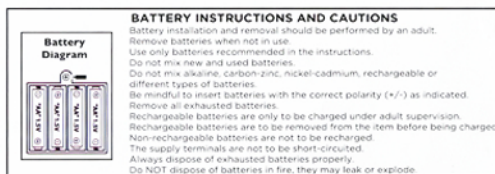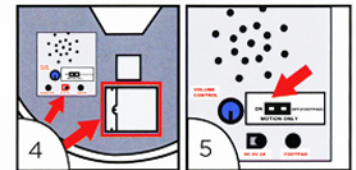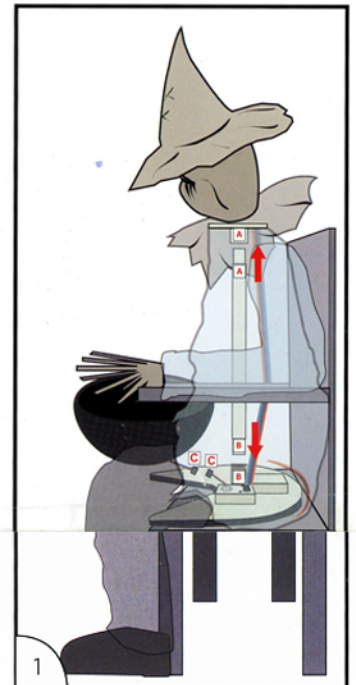

**Warning!** This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

### WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**

**STAY CLEAR OF ITEM WHILE OPERATING.**

**DO NOT PLACE ITEM ON UNEVEN GROUND.**

**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

**\*\* FOR INDOOR USE ONLY \*\***



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.



visit us at [tekkydesign.com](http://tekkydesign.com)

Requires 6V 2A ADAPTER (included) or 4 AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

SITTING SCARECROW™ is a trademark of Tekky.  
Copyright © 2017 Tekky.  
All Rights Reserved.  
MADE IN CHINA

### SMART PHONE SCAN SETUP VIDEO

