

W ETING

TWISTED, TWISTING UNDEAD GHOUL... RISEN FROM THE GRAVE TO STARTLE YOU!

SOUND AND MOTION ACTIVATED

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- Carefully remove and discard packaging.
- Using a small Phillips/crosshead screwdriver. open the battery compartment located on back of TWISTING ZOMBIE™. Insert 3 brand new "AA" alkaline batteries, replace cover and screw.
- 3. Place switch on back of TWISTING ZOMBIE™ to the "ON" position.
- Make a loud sound (clap) or wave hand in front of TWISTING ZOMBIE™ to activate scary sequence! NOTE: Leave switch in the "OFF" position when

not in use. SURFACE WASHABLE ONLY. All new materials: plastic, fabric, foam.

Item #60075. TWISTING ZOMBIE™ is a trademark of Tekky. Copyright © 2021 Tekky. All Rights Reserved. Manufactured for Tekky, Orland Park, IL 60467 USA MADE IN CHINA

TekkyDesign.com



3AA BATTERIES REQUIRED

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed, so keep away from young children.
- Remove batteries when not in use.
- · Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- · Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- · The supply terminals are not to be short-circuited.
- · Always dispose of exhausted batteries properly.
- . Do NOT dispose of batteries in fire, they may leak or explode.

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

