

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-125060 Graveyard Host



Please follow the step by step guide and enjoy your Graveyard Host!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.


⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.



1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Base Rear x 1
 - B. Base Front x 1
 - C. Knee Poles x 2
 - D. Boots x 2
 - E. Poles x 2
 - F. Foam Tubes x 2
 - G. Pants x 1
 - H. Waist Frame x 1
 - I. Shirt x 1
 - J. Body Frame x 1
 - K. Left Arm x 1
 - L. Right Arm x 1
 - M. Left Arm x 1
 - N. Right Arm x 1
 - O. Head x 1
 - P. Cape x 1
 - Q. Hat x 1
 - R. Shovel x 1
 - S. Shovel Pole x 1
 - T. Stakes x 4
 - U. Step Here Pad x 1
 - V. Adapter (Included) x 1
- Input: 120V AC 50/60Hz
Output: 5.9V 3.0A

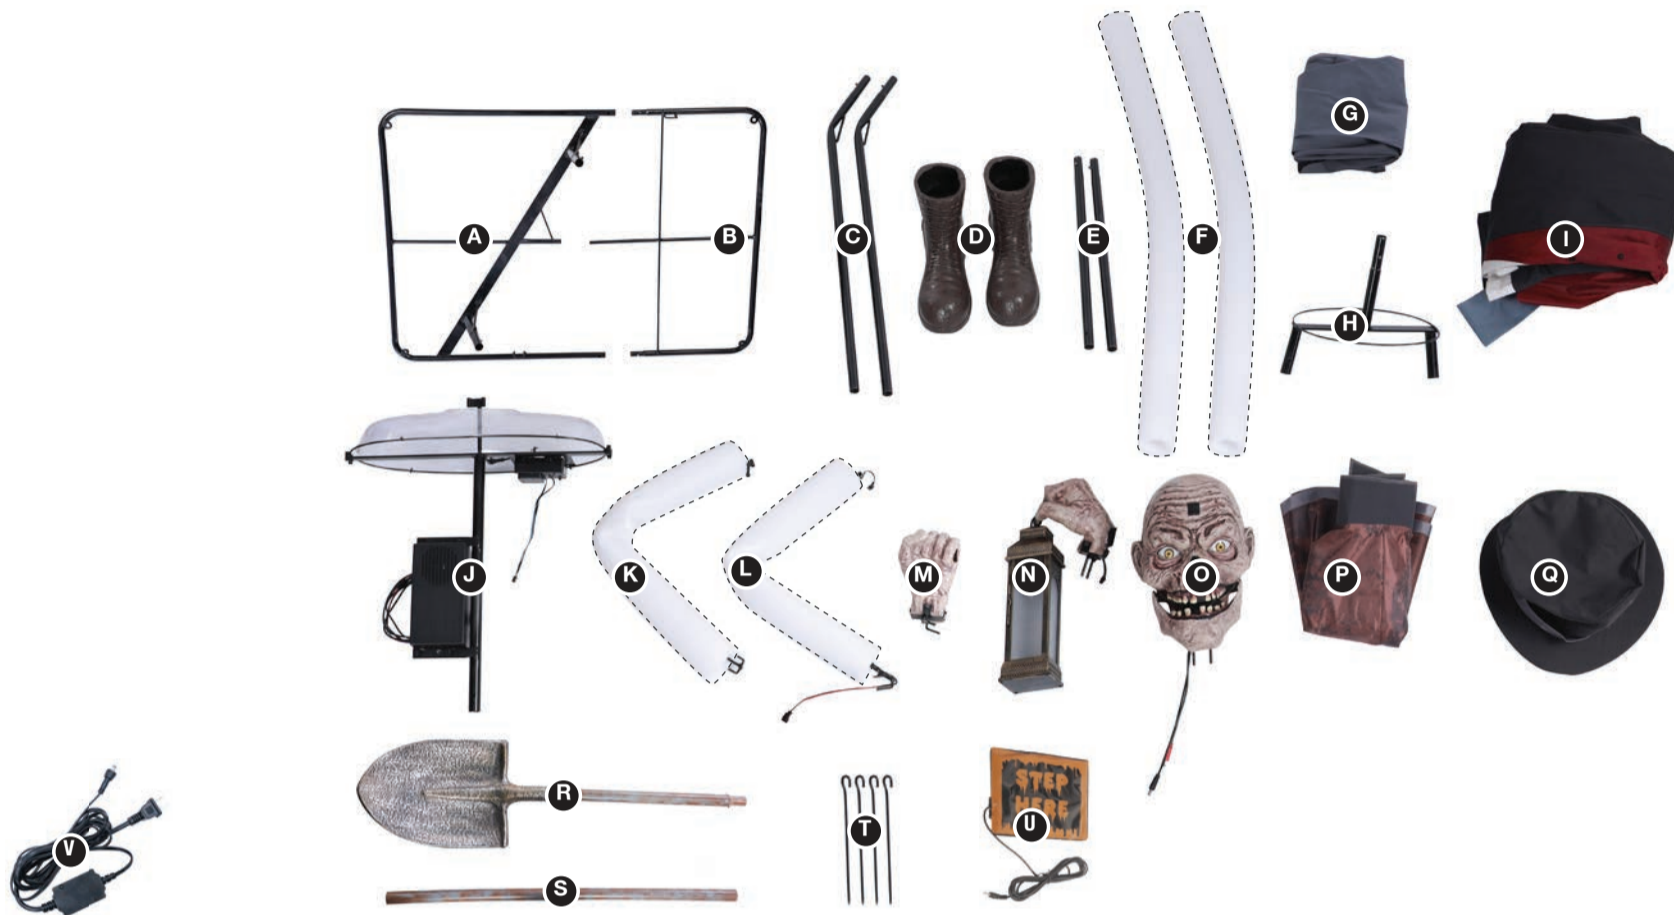

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM, OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

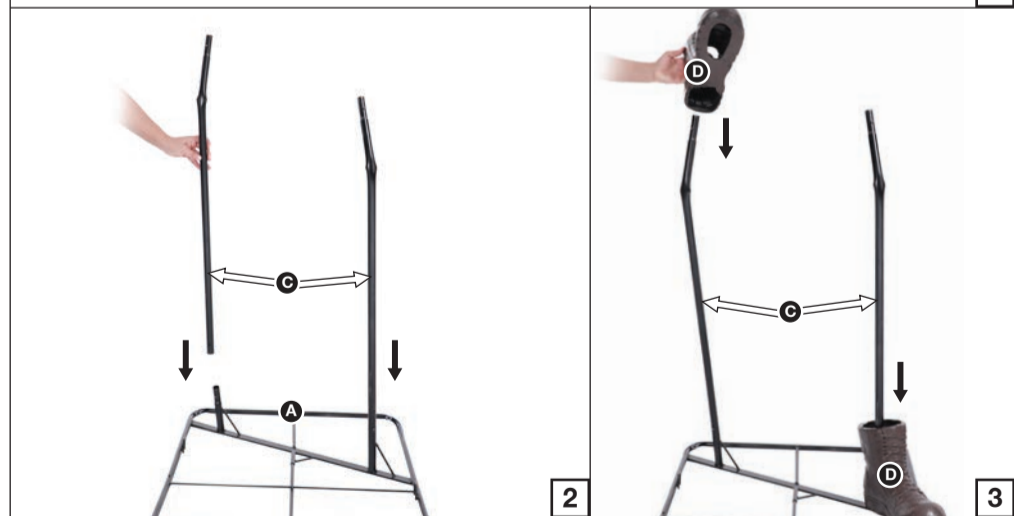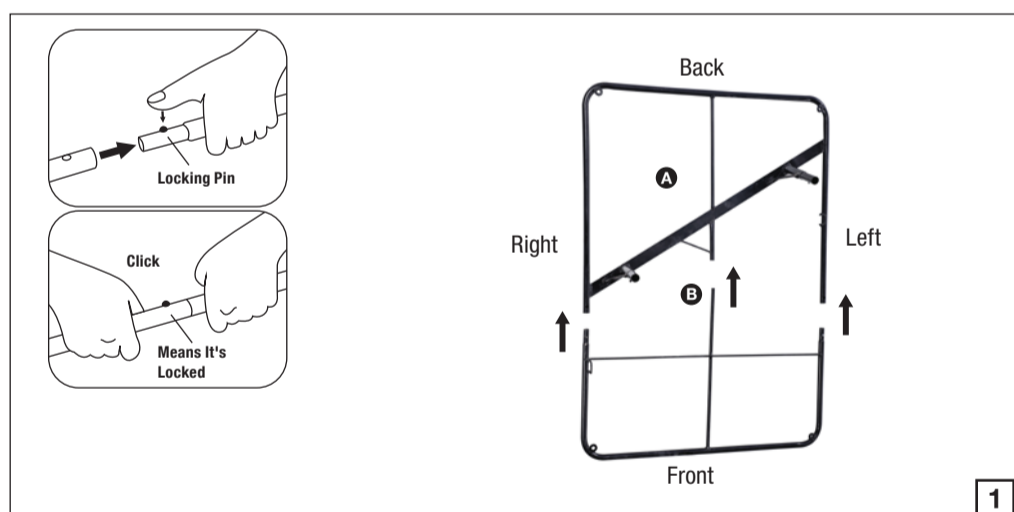



STEP 1

Note: Throughout the instructions, Left and Right are from the character's point of view.

Attach the (A) Base Rear to the (B) Base Front using the available quick connect push buttons and pre-drilled holes as shown in Figure 1.

Attach the (C) Knee Poles to the poles available on the (A) Base Rear by using the available quick connect push buttons and pre-drilled holes as shown in Figure 2.

Slide the (D) Boots down over the (C) Knee Poles and let them rest over the pegs available on the (A, B) Base as shown in Figure 3.

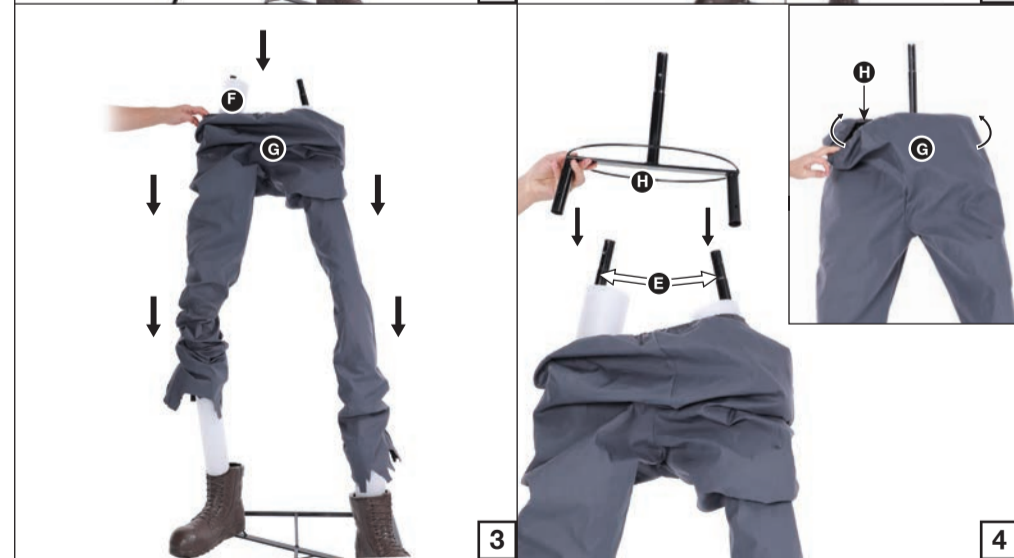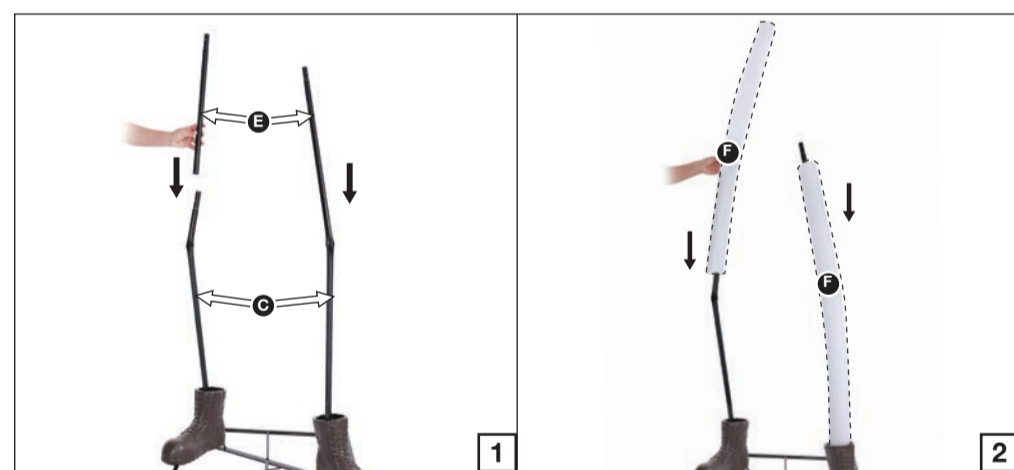


STEP 2

Attach the (E) Poles to the (C) Knee Poles using the quick connect push buttons and pre-drilled holes as shown in Figure 1.

Slide the (F) Foam Tubes over the (C, E) Poles as shown in Figure 2.

Slip each pant leg of the (G) Pants over the (F) Foam Tubes. Make sure the top of the (E) Poles emerges through the top of the (G) Pants as shown in Figure 3.

Attach the (H) Waist Frame to the (E) Poles using the available quick connect push buttons and pre-drilled holes. Then bring the (G) Pants up over the hoop available on the (H) Waist Frame as shown in Figure 4.

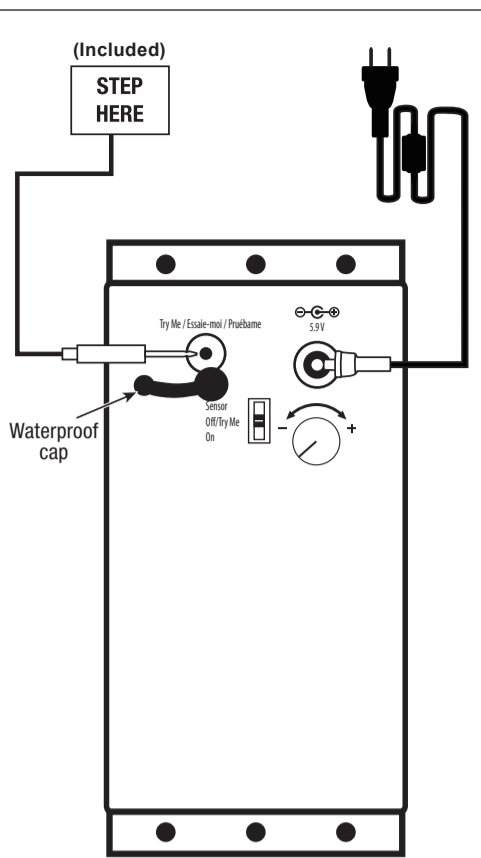

OPTIONAL: If you choose to use the Step Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step pad in front of the character when ready to display.

Note: Do not plug the Power Adapter into power outlet until item assembly is completed.



STEP 3

Slip the (I) Shirt over the (H) Waist Frame and make sure that the top of the (H) Waist Frame emerges from the top of the (I) Shirt. The opening of the (I) Shirt should be facing the back as shown in Figure 1. Then attach the (J) Body Frame to the (H) Waist Frame by using the available quick connect push button and pre-drilled hole as shown in Figure 2.

Warning: The waterproof cap must cover the Try Me receiver when not in use as shown in Figure 3. Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box and route the Power Adapter down and out the bottom of the item.




STEP 4

Slide the (K) Left Arm up the left sleeve of the (I) Shirt as shown in Figure 1.

Then set the forked hook of the (K) Left Arm into the housing available on the left side of the (J) Body Frame as shown in Figure 2.





Slide the (L) Right Arm up the right sleeve of the (I) Shirt as shown in Figure 3.

Set the forked hook of the (L) Right Arm into the housing available on the right side of the (J) Body Frame as shown in Figure 4.

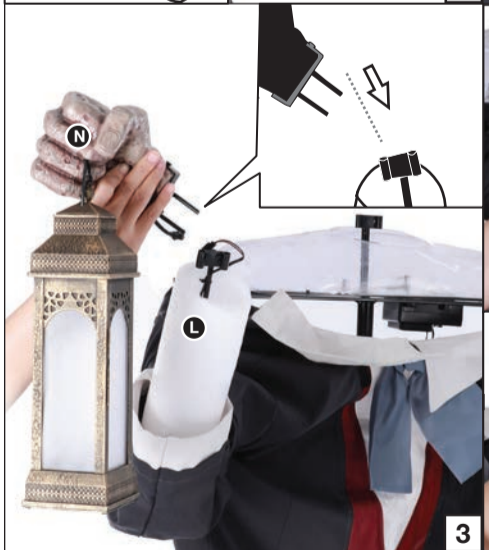

STEP 5

Slide the forked hook of the (M) Left Hand into the housing available at the end of the (K) Left Arm as shown in Figure 1. Attach the left sleeve of the (I) Shirt to the wrist of the (M) Left Hand by using the available hook and loop closure as shown in Figure 2. Set the forked hook of the (N) Right Hand into the housing available at the end of the (L) Right Arm as shown in Figure 3. Connect the cable available from the (N) Right Hand to the corresponding cable available on the (L) Right Arm as shown in Figure 4. Attach the right sleeve of the (I) Shirt to the wrist of the (N) Right Hand by using the available hook and loop closure as shown in Figure 5.

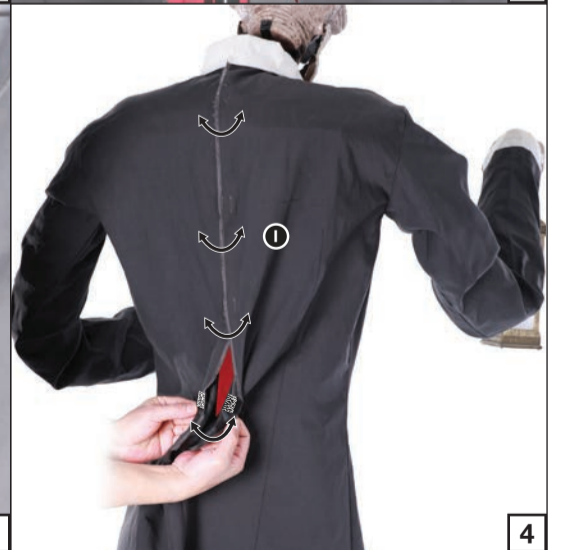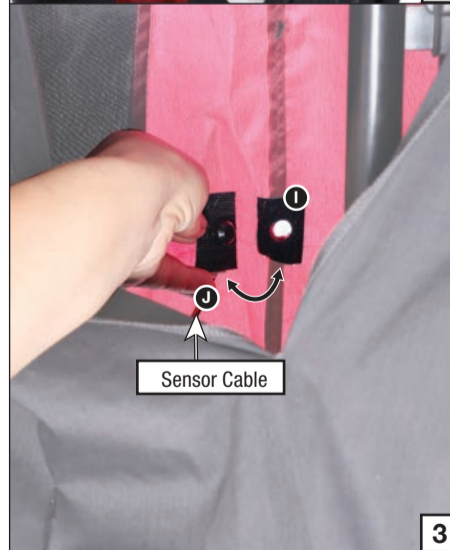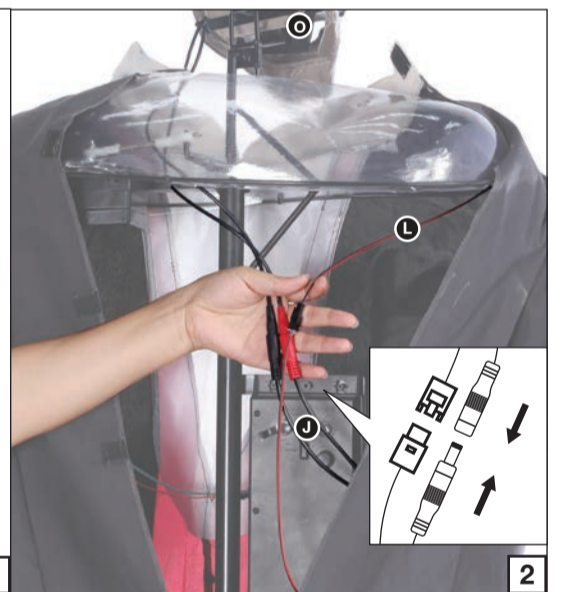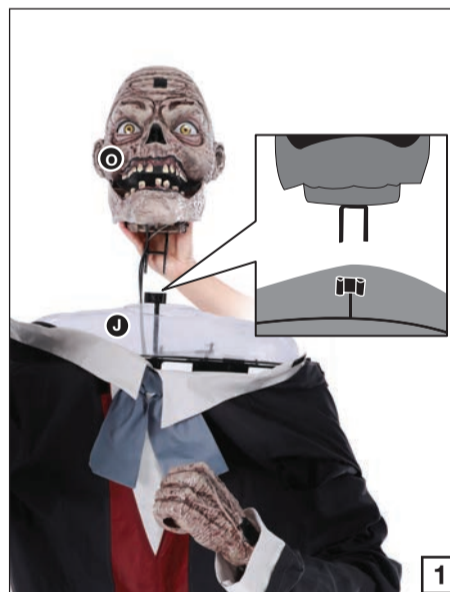

STEP 6

Slide the forked hook of the (O) Head into the housing available at the top of the (J) Body Frame as shown in Figure 1.

Connect all cables from the Function Control Box to their corresponding cable by shape and color as shown in Figure 2.

Attach the Sensor to the hole in front of the (I) Shirt from the inside using the available hook and loop closure as shown in Figure 3.

Close the back of the (I) Shirt using the available hook and loop closures as shown in Figure 4.



STEP 7

Secure the (P) Cape to the top of the (I) Shirt using the available hook and loop closures as shown in Figure 1.
 Place the (Q) Hat on the (O) Head and secure in place using the available hook and loop closures as shown in Figure 2.
 Slide the end of the (R) Shovel into the hole in the (M) Left Hand as shown in Figure 3.



STEP 8

Slide the (S) Shovel Pole in through the bottom of the (M) Left Hand and connect it to the (R) Shovel as shown in Figure 1.
 If assembling on soft ground outdoors, firmly push the (T) Stakes through the holes available on the (A, B) Base and into the ground as shown in Figure 2.
 Be sure to display on level ground.
 Your Graveyard Host is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (J) Body Frame, as desired.

2. Settings:

Sensor	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
Off/Try Me	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Included). The item will operate for one audio cycle with each Try Me activation.
On	This switch mode will continually operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

