

3/3620 Metal Circle Arch Instructions

©2016 Oriental Trading Company, Inc.
OrientalTrading.com (800)-875-8480


BEFORE YOU BEGIN ASSEMBLY:

- Check that all materials are included in your kit.
- Please read through the instructions before you begin assembly.
- Make sure that your work area is spacious enough to assemble the arch.
- Assembly time should be about 2 hours for two people.
- Gloves (not included) recommended when assembling.

COMPONENTS INCLUDED


Long Screw
X 28

A




Short Screw
X 16

B




Cross Brace
X 5

C




Left Base
X 1

D




Right Base
X 1

E




Screwdriver
X1

N




F

Left Curved Large
Base Section
X 2

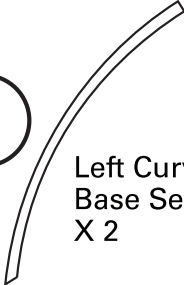


G

Right Curved Large
Base Section
X 2




H

Curved Large Section
X 4

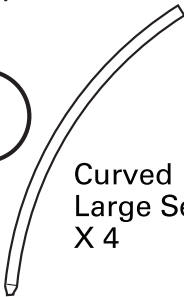


I

Curved Large
Connecting Section
X 2

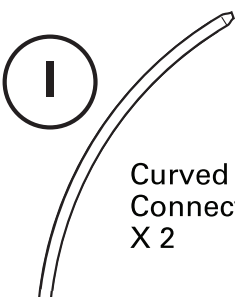


J

Right Curved Small
Base Section
X 2




K

Left Curved Small
Base Section
X 2




L

Curved Small Section
X 4




M


Curved Small
Connecting Section
X 2

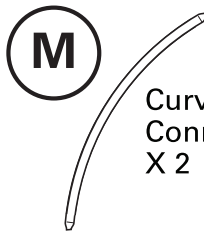


STEP 1:
Assemble both of the large arches as shown below using the short screws (B) and screwdriver (N). Pieces will fit together very snugly.

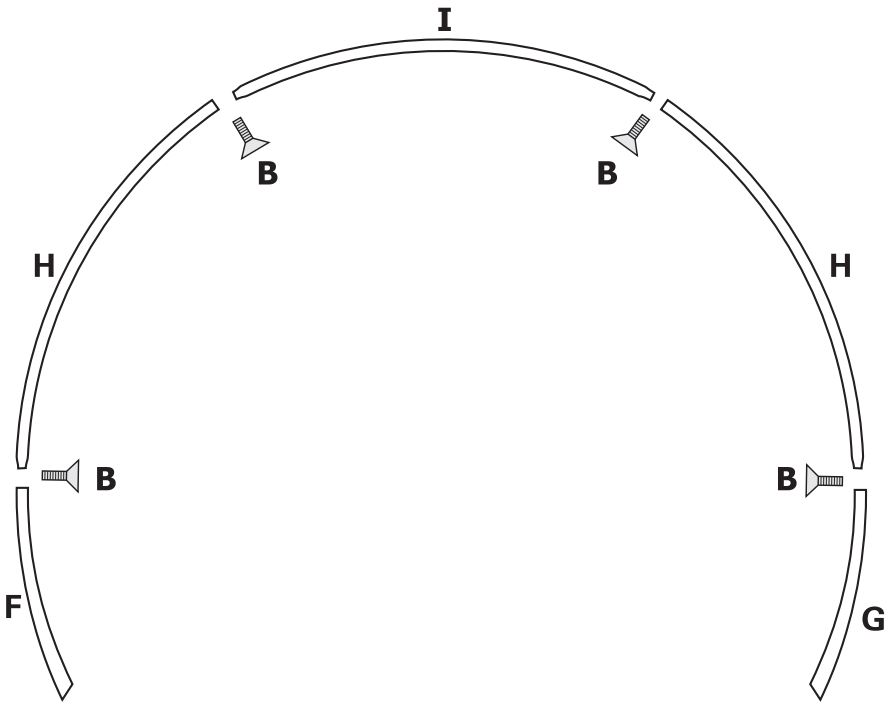

STEP 2:
Assemble both of the small arches as shown below using the short screws (B) and screwdriver (N). Pieces will fit together very snugly.

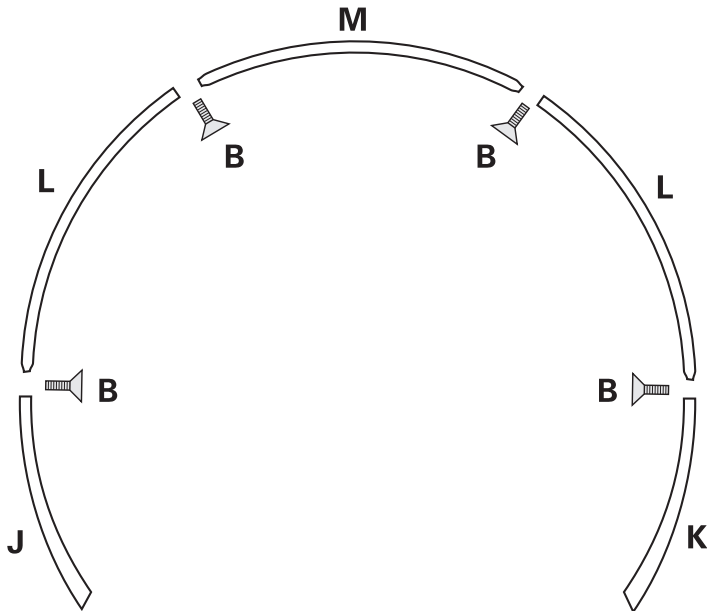

STEP 3:
Lay out the large and small arches as shown. Taking the screwdriver (N), secure the cross braces (C) to the arches using the long screws (A).

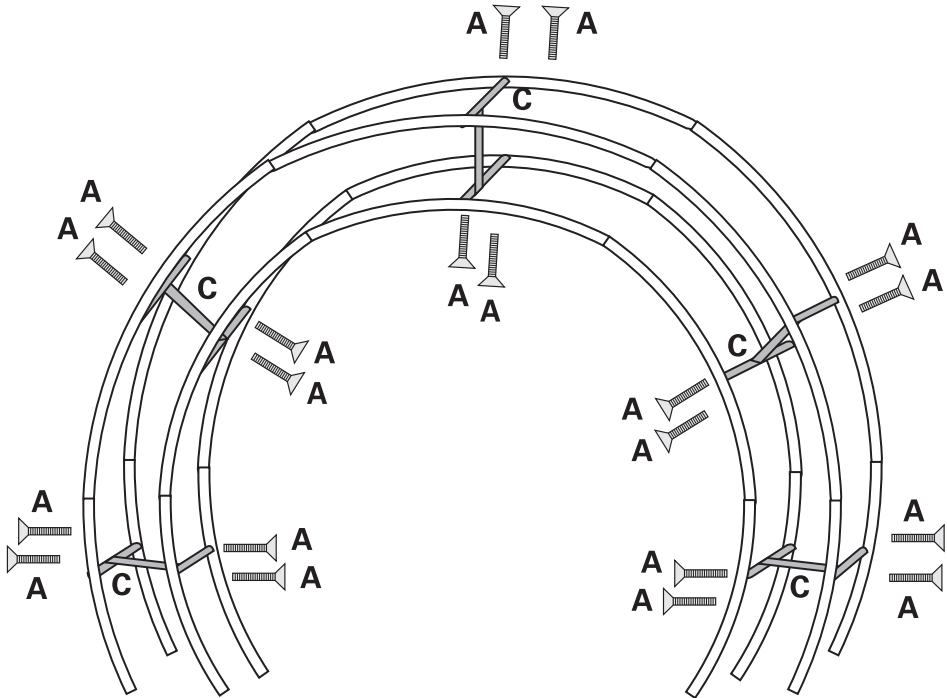

STEP 4:
Taking the screwdriver (N), secure the bases (D and E) to the arches using the long screws (A).

